

INSTALLATION INSTRUCTIONS

Item#4848-276 (New. 03/ 22/ 2014)

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER .

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

ASSEMBLING THE FIXTURE (Fig.2)

1. Shut off the power at the fuse box or circuit breaker. If necessary, remove the old fixture including the mounting hardware.
2. Carefully remove the new fixture from the carton and check that all parts are included as shown in the illustration.
3. Attach the cap (A) to the fixture body (C) by turning it clock wise until tight.
4. Hang the long crystal chains (B) to the cap (A).
5. Hang the short crystal chains (D) to the fixture body (C).
6. Attach the acrylic ball (E) to the fixture body(C) by turning it clock wise until tight.
7. Install the light bulbs (not included) in accordance with the fixture's specifications: **DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**

HANGING THE FIXTURE (Fig.1)

1. Thread the nipple into the ceiling loop until snug.
2. Thread the other end of nipple with the ceiling loop attached into the crossbar until snug.
3. Place the lock washer and hex nut over the end of nipple protruding through crossbar. Then thread the hex nut until tight.
4. Take this crossbar assembly and mount to the ceiling junction box with the mounting screws (**Size: #8-32N*L0.5"**). Tighten the mounting screws securely with a screwdriver. The side of crossbar marked "GND" must face out.
5. Attach the chain to the fixture loop (A) using quick link. Quick link must be completely threaded closed when installed.
6. By measuring, determine the correct number of links needed for the desired hanging height. Using a pair of chain pliers disconnect and discard the excess chain.
7. Carefully lace the fixture wires through the chain.
8. Slip the lock collar and canopy over the chain.
9. Use the quick link to connect the end link of the chain to the ceiling loop. Then close the quick link.
10. Feed the fixture wires through the ceiling loop and nipple and pull until tight.

CONNECTING THE WIRES (Fig.3)

1. At this point, connect the electrical wires as shown in Fig. 3, making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the crossbar using the green screw provided.
2. Tuck these wire connections neatly into the ceiling outlet box and raise the canopy (G) all the way to the ceiling. Then raise the lock collar (H) and thread onto the ceiling loop protruding through canopy.

Your installation is now complete. Return power to the outlet box and test the fixture.

Fig.1

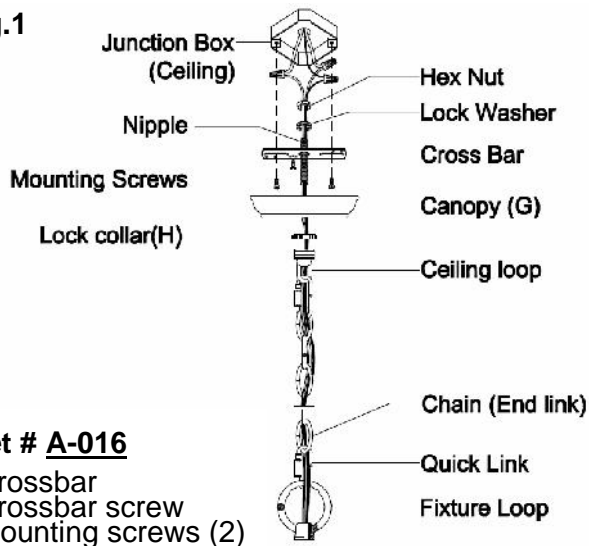


Fig.2



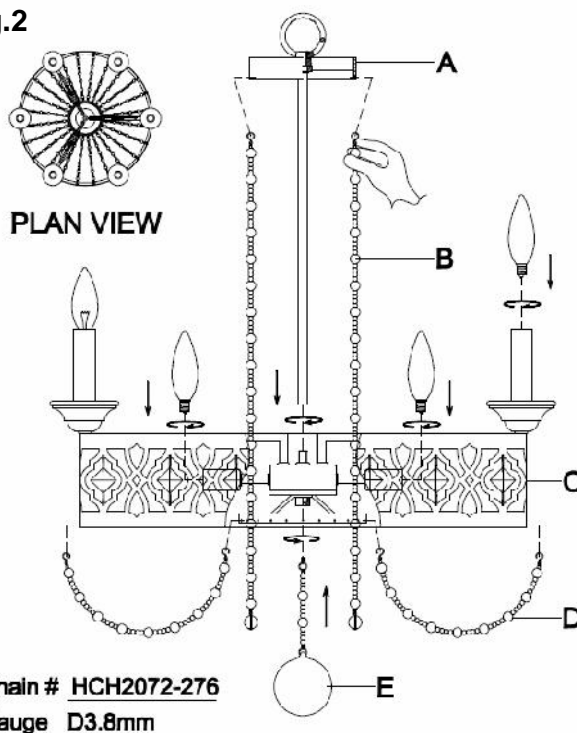


Fig.3

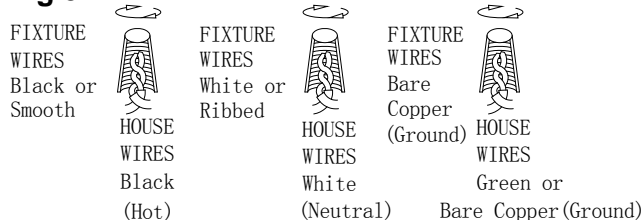

CHAIN HUNG FIXTURE INSTRUCTION

Notice: It is important to use proper chain pliers (not included) To OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

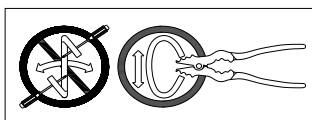

american
lighting
association

C ETL US
Intertek