
# MIGHTYLITE Job Light INSTRUCTION MANUAL

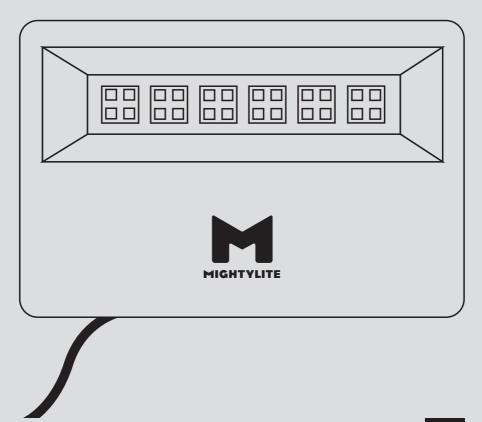

8W, 16W, 28W & 50W Job Light with H Stand





#### HYLITE MIGHTYLITE JOB LIGHT WITH CABLE- INSTALLATION AND OPERATING INSTRUCTIONS

The Mightylite Job Light is compact and lightweight with an extremely tough polycarbonate casing. Utilizing the latest bright LEDs. Making it perfect for use in all working environments.

The unit will function using 110/230 AC 50Hz.

#### IMPORTANT SAFETY INSTRUCTIONS

PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO INSTALL AND OPERATE THIS LIGHT.

#### IMPORTANT INSTALLATION INSTRUCTIONS

#### IMPORTANT OPERATION & MAINTENANCE INSTRUCTIONS


- DO NOT position the light near flammable or combustible materials (such as wood, cloth, paper) or near flammable, combustible or explosive liquids, solids, gases or equipment.
- DO NOT direct the light into a person's eyes. This light has a very intensive light output, which if incorrectly used could cause eye damage.
- ALWAYS disconnect the power supply before servicing or performing any maintenance.
- ALWAYS maintain the light in good condition, with repairs only undertaken by a qualified electrician.
- ONLY carry out repairs using genuine parts. Non-authorized parts may be dangerous and will invalidate the warranty.

## 230V - 110V. Auto select. For 110V usage, use 110V plug

#### TROUBLE SHOOTING


If your lob Light does not operate after following all of the instructions, please try the following steps:

- Check that the ON switch is in the correct position
- Check that the Work Light is plugged in.
- Check the fuse in the plug.

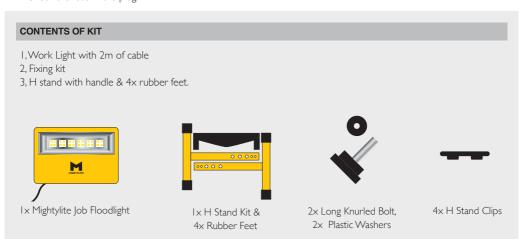

### **HOW TO OPERATE THE JOB LIGHT:**

- Check the contents in the box.
- Build the H Stand as shown below using the clips provided and make sure the handle is secure.
- Mount the H Stand onto the Work Light using the KNURLED BOLTS provided.
- Plug the Work Light in and its ready to go.

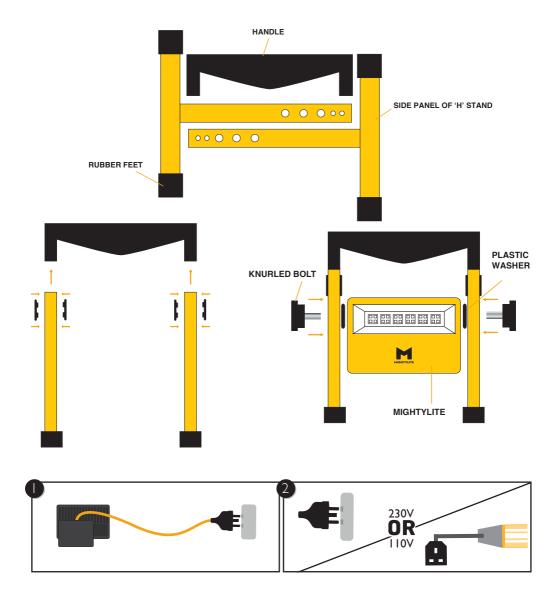



NOTES			

