

General Safety Information

▲ CAUTION

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

Review the diagrams thoroughly before beginning. If you feel you do not have electrical wiring experience, have your fixture installed by a qualified licensed electrician.

All electrical connections must be in accordance with local codes, ordinance, and the National Electric Code. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.

Before starting the installation, disconnect the power by turning off the circuit breaker or by removing the appropriate fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.

Do not use outdoors.

Equipment should be mounted in locations and at heights where it will not readily be subject to tampering by unauthorized personnel.

Do not use this equipment for other than intended use.

Qualified personnel should perform all servicing.

▲ WARNING

WARNING – Risk of fire or electric shock. Install this kit only in the luminaires that has the construction features and dimensions shown in the photographs and/or drawings.

WARNING – Do not make or alter any open holes in an enclosure of wiring or electrical components during MaxLite® BayMAX™ installation

WARNING – Risk of fire or electric shock. MaxLite® BayMAX installation requires knowledge of the lighting luminaires electrical systems. If not qualified, do not attempt installation and contact a qualified electrician.

Operating characteristic

Voltage input: 120-277V 50/60 Hz


Operating temp: -4 F to 104F




Picture is for illustration purposes only.
Your model may vary.

Wiring Diagram

BLHTXXXUSD48XX

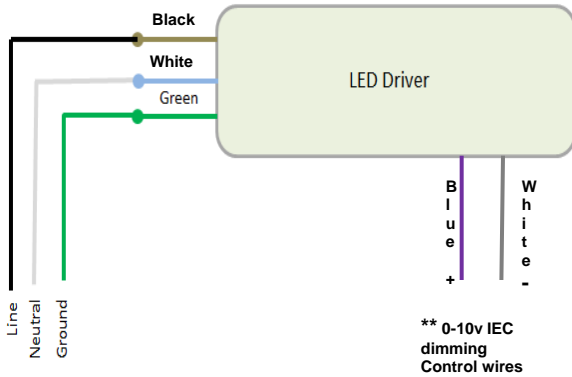

BLHTXXXUAB48XX



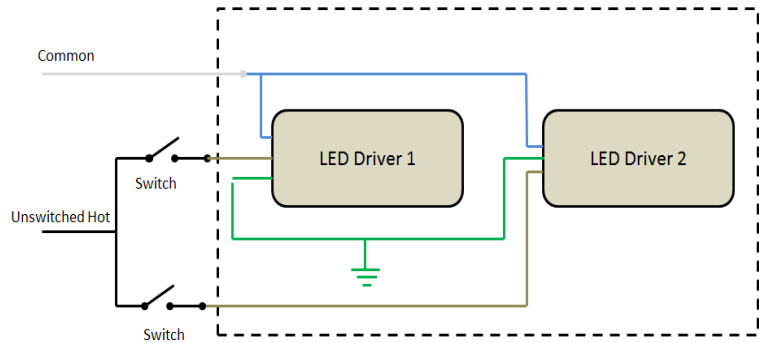


⚠ WARNING

All units must be individually connected to the AC supply:
 Select appropriate access point for your installation, remove knockout, and feed power leads through hole.
 Connect the supply wire from the source to the driver.
 Black or Brown = Line White or Blue = Neutral Green or Yellow with Green stripe = Ground
 **Consult with dimmer control manufacturer's wiring instructions

Mounting




Using V hook and Chain (chain not included)

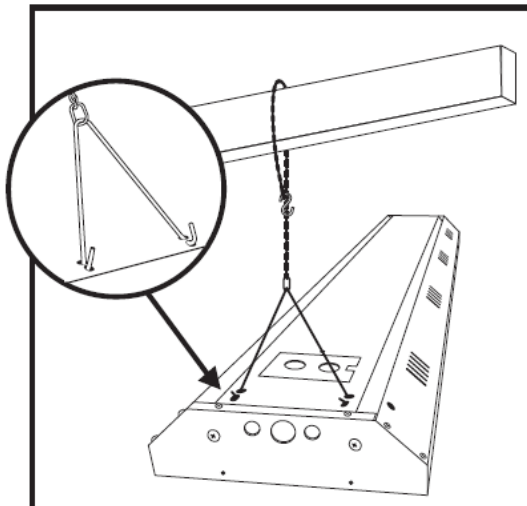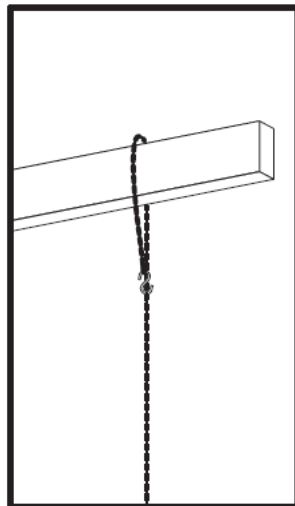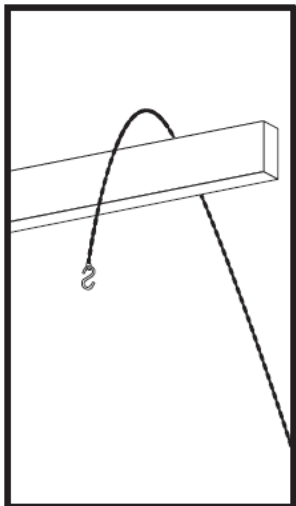

1. Wrap the chain around the ceiling or service attachment point.
2. Loop the chain around the ceiling or service attachment point. Use an "S" or similar end connector to close the loop.
3. Slide the other end of the chain through the V-hook provided with the fixture. Install the V-hook into the two slots shown above to support the fixture.




Using MaxLite's optional MLCHKSQ (CABLE HANGING KIT FOR SQUARE FLAT PANELS & LINEAR HIGHBAY FIXTURES) Order Code: 71119

Releasing cable:

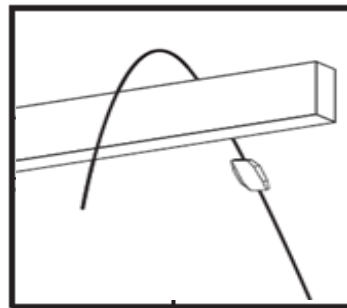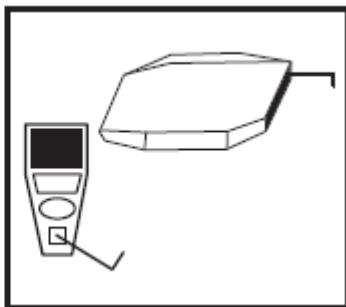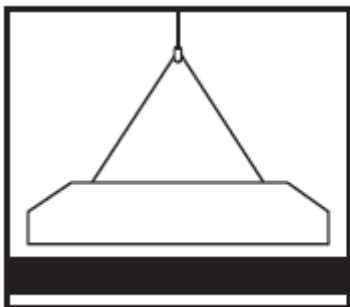

1. Make sure the load is supported before releasing the Gripper.
2. Use the pin provided or the push button on the Gripper to release the cable.
3. Unwrap the cable around the ceiling or support to remove the cable.

Install:

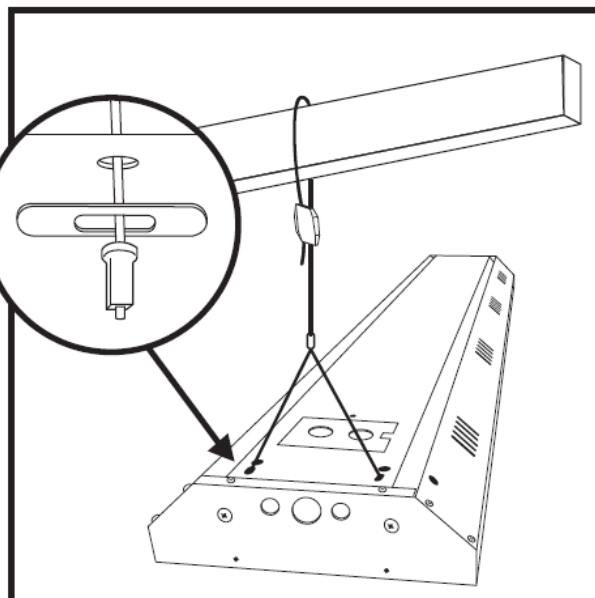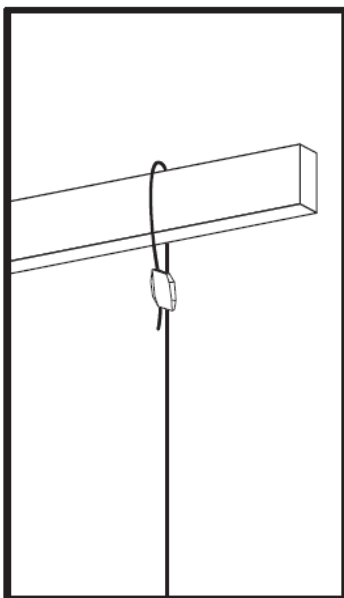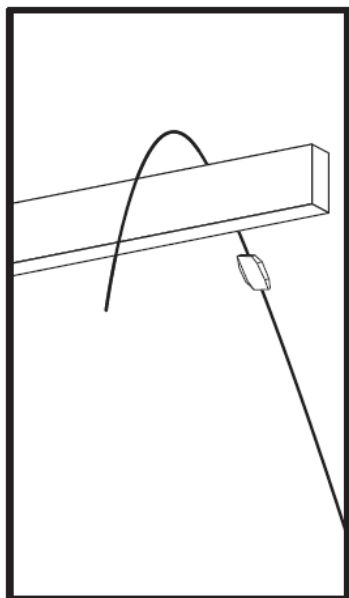

1. Thread the cable into the Gripper Express and pull cable through
2. Loop around the ceiling or the service attachment point; pass the tail end of the cable through the other hole of the Gripper. Pull the end of the cable to the desired length or service height.
3. Use the desired holes to mount the fixture. Remove the v-hook if you intend to mount the inner pair of the mounting holes.



Warranty

MaxLite warrants to its customers who purchase its commercial LED fixtures that the products are free from defects in material and workmanship for a period of five years from the date of the first purchase from MaxLite. This warranty will be extended to the end-users of the products that purchase from customers who purchase the product from MaxLite for resale. This warranty will be subject to the following provisions:

This warranty is void if the product or the lighting system with which the product is operated is not installed, operated, or maintained in accordance with:

- The National Electric Code (NEC)
- The Standards for Safety of Underwriters Laboratories, Inc. (UL)
- The Standards of the American National Standards Institute (ANSI)
- The specific instructions supplied by MaxLite for the installation, operation, and maintenance of the product

This warranty is void if the product is operated outside of its normal operating conditions. The minimum starting temperature is -4 °F * and the maximum ambient temperature is 104 °F. The product should only be used with compatible building control devices and dimmers when applicable. In order to make a claim under the warranty, the customer must notify MaxLite in writing seeking return authorization and provide the defective products (or, if authorized by MaxLite, a sample of such defective products) to MaxLite.

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY WITH RESPECT TO ANY CLAIM OR DAMAGE ARISING OUT OF, OR IN CONNECTION WITH, THE SALE OF ANY PRODUCT, OR ANY BREACH BY MAXLITE OF ITS OBLIGATIONS WITH RESPECT THERETO, SHALL BE LIMITED TO REPLACEMENTS OF THE PRODUCTS OR REFUND OF THE PURCHASE PRICE PAID BY CUSTOMER TO MAXLITE FOR THE PRODUCTS, AT MAXLITE'S SOLE DISCRETION, PROVIDED, HOWEVER, MAXLITE SHALL HAVE NO LIABILITY WHATSOEVER TO CUSTOMER UNLESS (I) CUSTOMER HAS COMPLIED WITH THE REQUIREMENTS HEREUNDER FOR MAKING A CLAIM, (II) THE PRODUCTS ARE FOUND TO BE DEFECTIVE BY MAXLITE AND (III) CUSTOMER HAS PAID FOR THE PRODUCTS IN FULL WHEN DUE.

MAXLITE HEREBY EXPRESSLY DISCLAIMS ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND MAKES NO OTHER WARRANTIES TO CUSTOMER, EXPRESS OR IMPLIED, EXCEPT AS SPECIFICALLY PROVIDED FOR HEREIN.

UNDER NO CIRCUMSTANCES SHALL MAXLITE BE LIABLE TO CUSTOMER FOR ANY PUNITIVE OR EXEMPLARY DAMAGES OR ANY CONSEQUENTIAL, INCIDENTAL, INDIRECT, OR SPECIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF USE, PROFITS, REVENUE OR BUSINESS) ARISING FROM, OR IN ANY WAY RELATED TO, THE SALE, USE OF, OR INABILITY TO USE THE PRODUCTS, NOTWITHSTANDING ANY FAILURE OF ESSENTIAL PURPOSE OF ANY LIMITED REMEDY HEREIN. THIS EXCLUSION SHALL APPLY REGARDLESS OF WHETHER SUCH DAMAGES ARE SOUGHT BASED ON BREACH OF CONTRACT, BREACH OF WARRANTY, NEGLIGENCE, STRICT LIABILITY IN TORT, OR ANY OTHER LEGAL OR EQUITABLE THEORY.

MaxLite's obligation under this warranty shall be limited to, at its sole option, repairing or replacing defective products at its discretion. All repairs must be performed in MaxLite's factory. MaxLite will ship repaired/replacement drivers/fixtures to the Buyer at MaxLite's expense.

This warranty is subject to the terms and conditions of sale applicable to the initial purchase of the product from MaxLite, which shall take precedent.

For questions about this warranty, please contact your local MaxLite Representative or MaxLite at 1-800-555-5629 or info@maxlite.com or visit www.maxlite.com.