


Mounting Instruction

Recessed Mount


Drawings and pictures are for illustration purpose only.

The model you have may vary.


1. Remove the ceiling tile at an appropriate location where the product is to be installed.

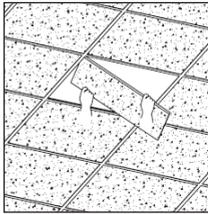

2. Put product into the ceiling channel and properly align it on the frame.

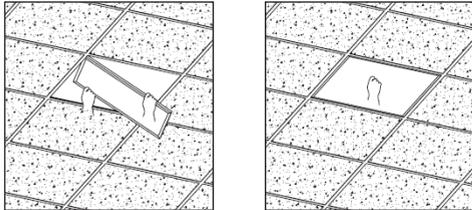

3. Secure panel to the ceiling with aircraft cable or wires capable of supporting 100lbs minimum (wire/cable not included).

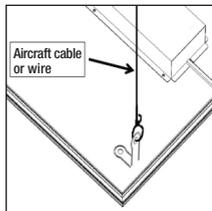

4. Remove the screw on driver cover. Connect main power supply and dimming control lines through terminals according to wiring diagram. Open one of the knockouts and connect the strain relief (included).
5. Inside the driver box, an extra connector is available for daisy chain wiring.



6. Re-install driver cover onto driver housing and secure in place with a screw.

Verbatim™

Installation Guide

Verbatim 5-year warranty www.verbatimlighting.com/warranty.
For support, visit www.verbatimlighting.com/support

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

• EUROPE/ MIDDLE EAST/ AFRICA: Verbatim Ltd, Prestige House,
23-26 High Street, Egham, Surrey, TW20 9DU, UK
• AMERICAS: USA Verbatim Americas LLC, Charlotte, NC
• AUSTRALIA/ NEW ZEALAND: Verbatim Australia Pty Ltd,
Unit 6, 450 Princes Highway, Noble Park, Victoria, 3174 Australia
Tel: +61 3 9790 8999 Fax: +61 3 9790 8955 Email: support@verbatim.com.au

Safety Information

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/ abrasions, and other hazards, be sure to read all warnings and instructions included with and on the fixture box and all fixture labels.
- The installation, service and maintenance of luminaires must be performed by a qualified licensed electrician.
- Do NOT install damaged product.
- **Make sure power is turned off at the breaker.**

WARNING: RISK OF SERIOUS INJURY AND PROPERTY DAMAGE

- Turn off the electrical power at fuse or circuit breaker box before any installation work.
- Turn off the power when you perform any maintenance.
- Verify that supply voltage is correct by comparing it with the luminaire label information.
- Do NOT use any input power except the voltage specified on the Product Specifications.
- Do NOT install in a wet environment.
- Ensure that all electrical and grounded connections are in accordance with the National Electrical Code or your local code requirements.
- All wiring connections should be capped with UL approved wire connectors.

CAUTION: RISK OF INJURY AND PROPERTY DAMAGE

- Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing, or performing maintenance.
- Avoid direct eye exposure to light source while it is on.
- Account for small parts and destroy packing material, as these may be hazardous to children.
- Ensure the fixture is properly secured to ceiling, T-bar grid, using wire or aircraft cable capable of supporting 100 lbs. minimum (wire/cable not included).
- Do NOT use this product for any purposes other than what is specified.

CAUTION: RISK OF FIRE


- Keep combustible and other materials that can burn away from luminaire and lamp/lens.
- MIN 90 SUPPLY CONDUCTORS.

Product Specifications

Part Number	LED Panel Model No.	Panel Size (Ft.)	Input Voltage (VAC)	Input Frequency (Hz)	Input Wattage (W)	Input Current (A)
99297	LED Panel PN22-W40-C40-010	2 x 2	100-277	50 / 60	40	0.125-0.500
99298	LED Panel PN22-W40-C50-010	2 x 2	100-277	50 / 60	40	0.125-0.500
99301	LED Panel PN24-W50-C40-010	2 x 4	100-277	50 / 60	50	0.160-0.600
99302	LED Panel PN24-W50-C50-010	2 x 4	100-277	50 / 60	50	0.160-0.600

- Operating Temperature: -4F to 104F (-20C to 40C)
- Suitable for damp locations.

Wiring Diagram

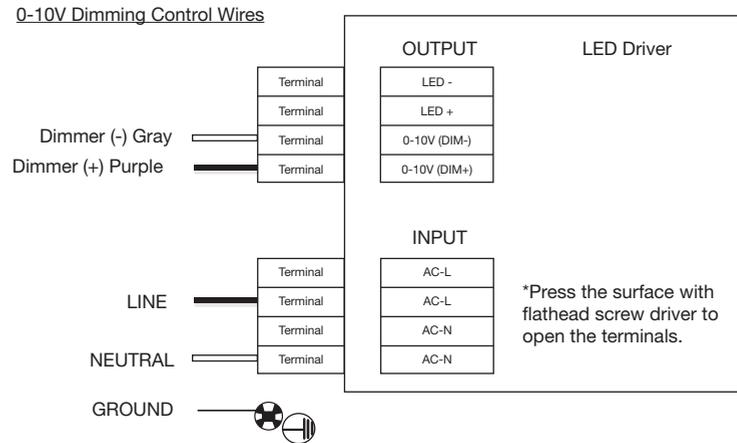

Before Installation

- Ensure that the distance between the T-bar and the actual ceiling is large enough for installation.
- Ensure that the T-bar grid size will accommodate the panel frame dimensions shown below.
- Weight load capability of T-bar framework should be verified.

Panel Size	Frame Size		Height		Weight	
	inch	mm	inch	mm	lbs.	kg
2 x 2	23.74 x 23.74	603 x 603	1.83	46.5	7.94	3.6
2 x 4	23.74 x 47.64	603 x 1210	1.83	46.5	15.65	7.1