QUOIZEL GOOSE CREEK, SC. 29445 www. quoizel. com

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631 273 2700 Fax 631.231.7102 www.quoizel.com

Assembly Instruction Sheet #IS-Q1770F For Styles Q1770F,Q1771FPN,Q1772FB

 $Please go to {\color{red} www.quoizel.com} for product cleaning tips. Go to the {\color{red} Care + Maintenance} selection.$

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (3)A19 Medium Base 60W Bulb Maximum, Alternate bulb (3) 13W CFL

Estimated Assembly Time: 30-45 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.


🛆 Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering July result.



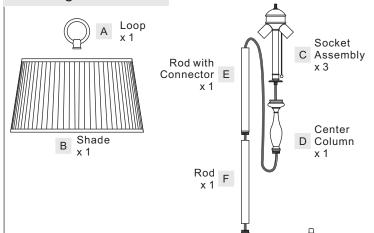


Base

Figure 1

STEP 2 - Install Shade


A. Attach the Shade (B) over the nipple on the top center of the Socket Assembly (C) and secure with the Loop(A). Hand tighten until snug.

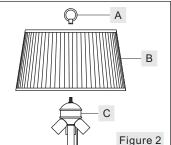

STEP 3 - Install Bulb


- A. This fixture uses standard bulb with medium base . Maximum 60 watts.
- B. Insert bulb and screw snugly into


Your fixture is now assembled and ready to use. Enjoy!

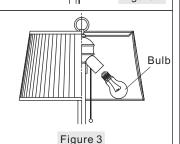

STEP 1 - Install Rods, Center Column and Socket Assembly

- A. Thread the Socket Assembly (C), the Center Column (D), the Rod with Connector (E), the Rod (F) and the Base (G) together as shown. Hand tighten until snug.
- B. Pull the cord from the Base (G) as you assemble the parts together to remove the excess cord between parts.

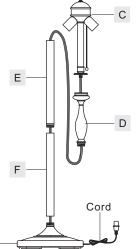

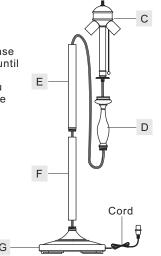


Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

July 2015

Q1770F/Q1771FPN/Q1772FB

FINISH: CUSTOM/PALLADIAN BRONZE/POLISHED BRASS

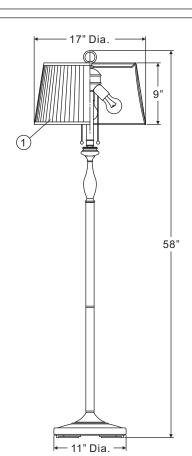

NOTE: ONE LIGHT SHOWN FOR ILLUSTRATION PURPOSES ONLY.



(3) 60W Medium Base Bulbs (Not Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.	ITEM NUMBER
1	S1529BE	SHADE PLEATED 14X17X9.50 Q1628FPN- Q1771FPN	1	Q1771FPN
1	S1521BE	SHADE PLEATED 14"X17"X9.50" Q1627F	1	Q1770F
1	S1610WH	SHADE 14X17X9.50X FOR Q1772FB Q1768FB	1	Q1772FB