




# Contemporary Lighting

PRODUCT NAME: Fizz 5-Light Pendant

ITEM NUMBER: E22765-89BZ

Please consult your electrician for hanging fixture and wiring.

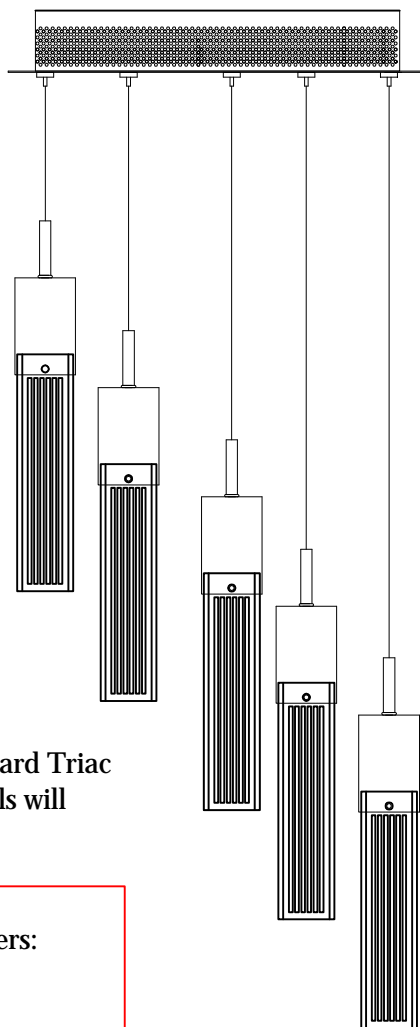

The fixture is designed to with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:

Lutron MACL-153M

Lutron DVL-153P

Lutron SCL-153P


Leviton IPL06-10Z

Leviton 6674-POW


Due to inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.

**WARNING:** Wires need to be connected to driver found in canopy and should not connect directly to power source or a short might occur.


**IMPORTANT:** Turn off the power at the main fuse or circuit breaker box before starting installation

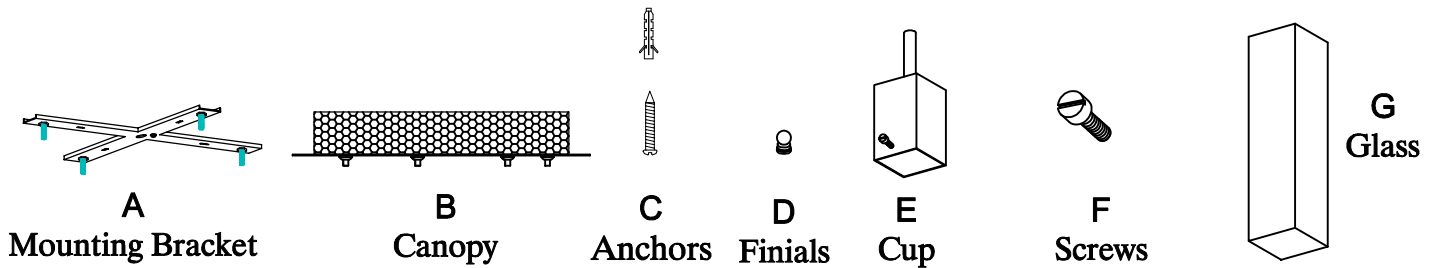

Locate all hardware & components before discarding packaging

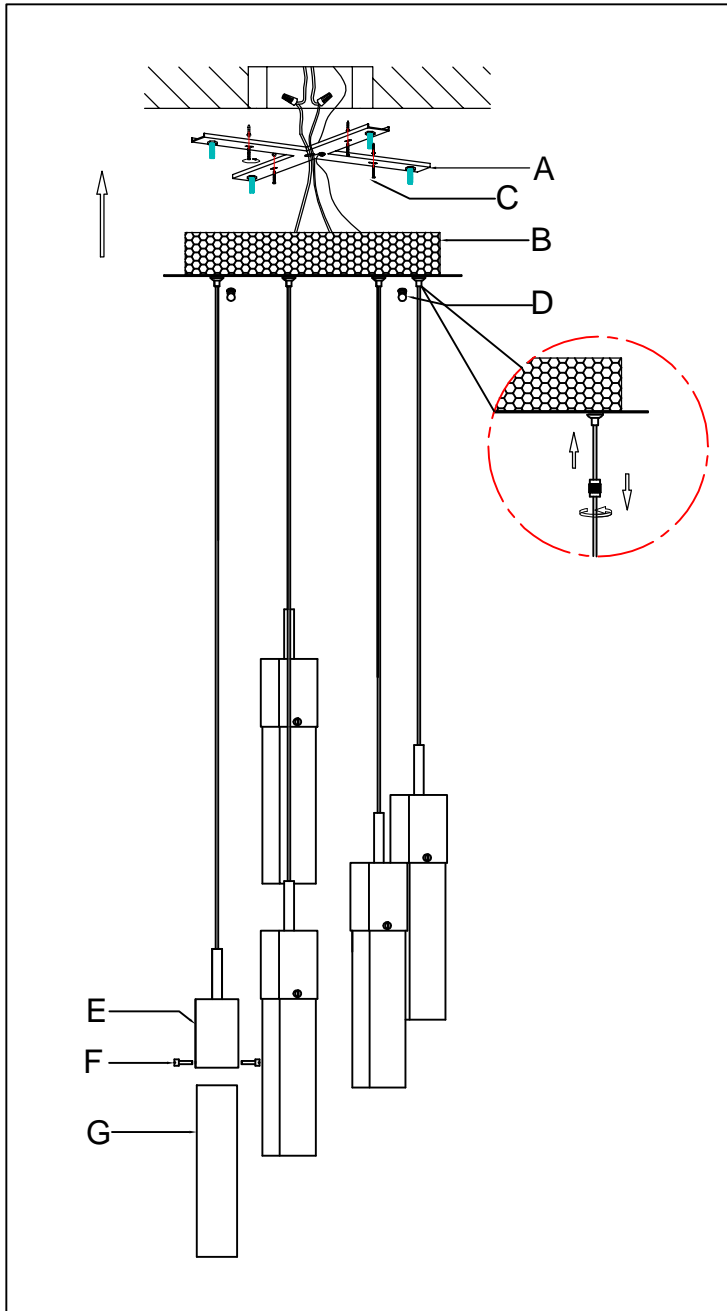


1.)

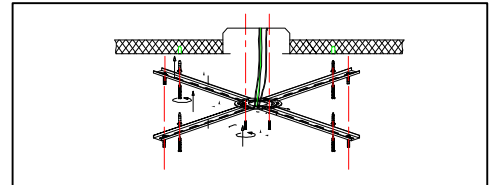


**Step 1:** Remove mounting bracket from fixture and install to electrical box using screws. Mark where anchors at ends of bracket (A) meet the ceiling. Remove mounting bracket (A) from ceiling. Drill holes using  $3/16'' \pm$  drill bit where marked. Install mounting bracket (A) to outlet box using screws and attaching anchors (C) to secure bracket at ends.

2.)

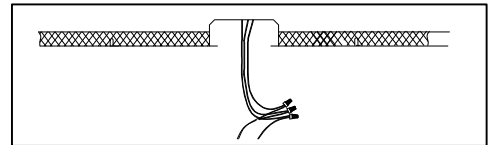

**Step 2:** Wire fixture to wires in outlet box. Copper wire is for Ground.

3.)

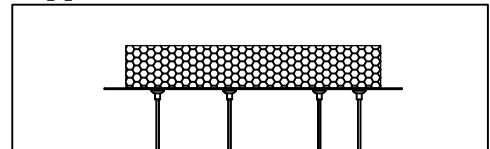


**Step 3:** Adjust wire length to desired mounting height, and tighten strain relief screws to secure. Install canopy (B) to bracket using finials (D) on the bottom of the canopy to secure.


#### Cleaning & Care:

Clean with soft cloth and a mild detergent.  
Do not use abrasive cleaner.

Pendant Wires

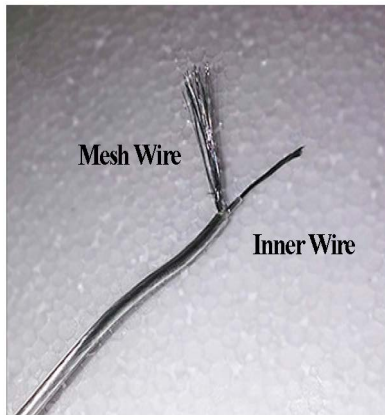


Driver Wires

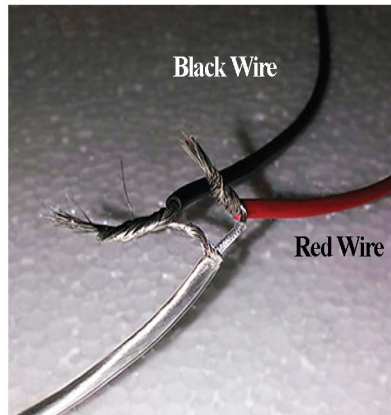


Pendant	Driver
Inner Wire (+)	Driver Red (+)
Outer Mesh (-)	Driver Black (-)

**Step 4.** If wires are cut in the process of adjusting the height, please note the pendants consist of an outer mesh wire(ground) and inner (live) wire that must be separated before re-joining with the driver output wires. Pendants are wired in series to the driver, as shown below

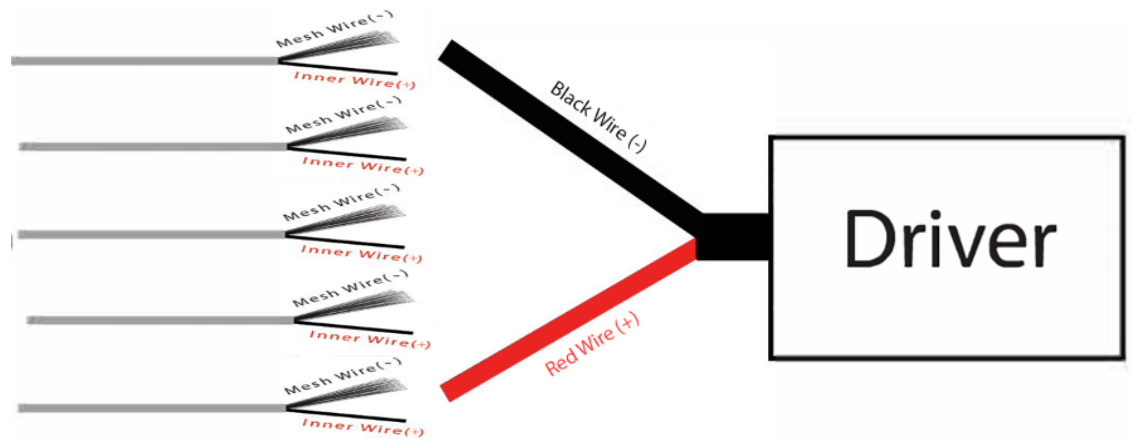

Wire Series

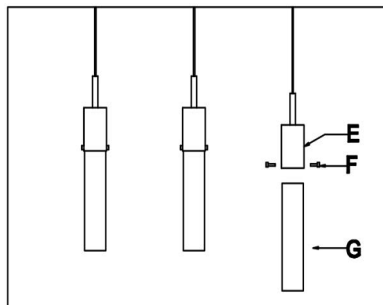

**Step 5.** Insert glass (G) into cup (E) and secure using two screws (F) provided. Install canopy (D) to bracket using screws at the ends of the canopy to secure.