


# Installation Instructions


## CPC Series Pipe Grounding Connectors

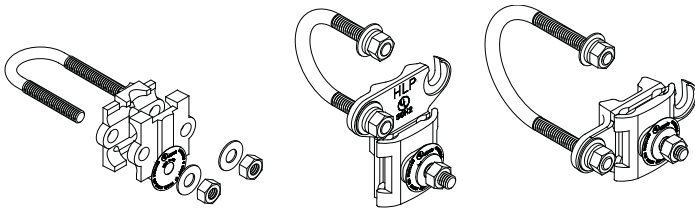


CPC.5/75

CPC1/1.25


CPC1.5/2 - CPC5/6

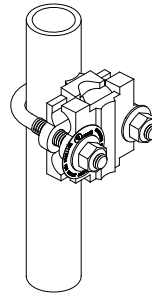

CPC.5/75

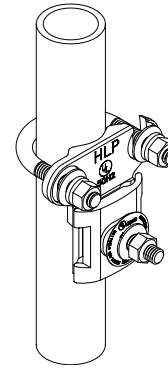


CPC1/1.25

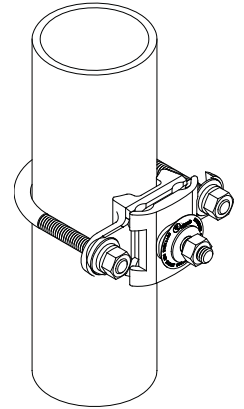


CPC1.5/2 - CPC5/6

- 1A) Remove hardware from U-bolt, then remove U-bolt from casting (CPC.5/75 only).  
 1B) For CPC1/1.25 through CPC5/6, loosen hardware and "swing" U-bolt out.


- 2) Prepare pipe mounting surface by removing paint, oil, debris, etc. and apply antioxidant.  
 3) Attach clamp to pipe loosely.

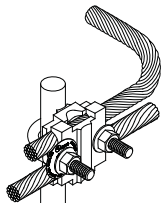


CPC.5/75

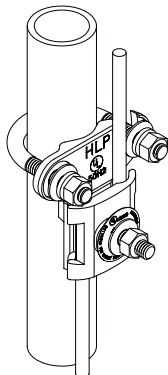


CPC1/1.25

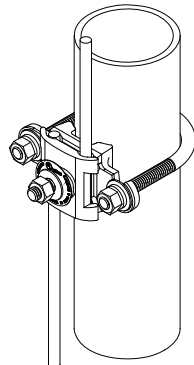


CPC1.5/2 - CPC5/6

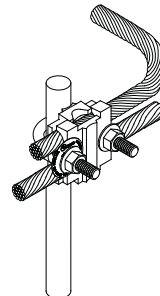

CPC.5/75

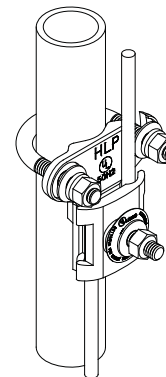

CPC1/1.25

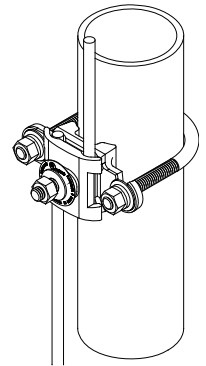

CPC1.5/2 - CPC5/6

- 4) Loosen bolt located on screw (CPC1/1.25 through CPC5/6 only).  
 5) Insert conductor(s).

- 6) Tighten all nuts to 75 inch pounds.



301 Ziegler Drive, Grayslake, IL 60030  
 Phone: 847-548-8700  
 Fax: 847-548-8755  
 Website: [www.harger.com](http://www.harger.com)