



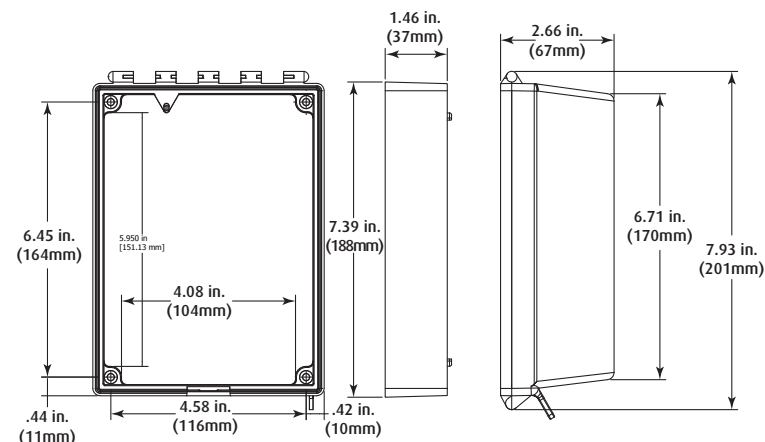

Safety Technology International, Inc.
2306 Airport Road • Waterford, Michigan 48327-1209
Phone: 248-673-9898 • Fax: 248-673-1246
Toll Free: 800-888-4784 • E-mail: info@sti-usa.com
Web: www.sti-usa.com

Safety Technology International Ltd
Taylor House • 34 Sherwood Road • Bromsgrove
Worcestershire • B60 3DR • England
Tel: +44 (0)1527 520 999 • Fax: +44 (0)1527 501 999
E-mail: info@sti-europe.com • Web: www.sti-europe.com

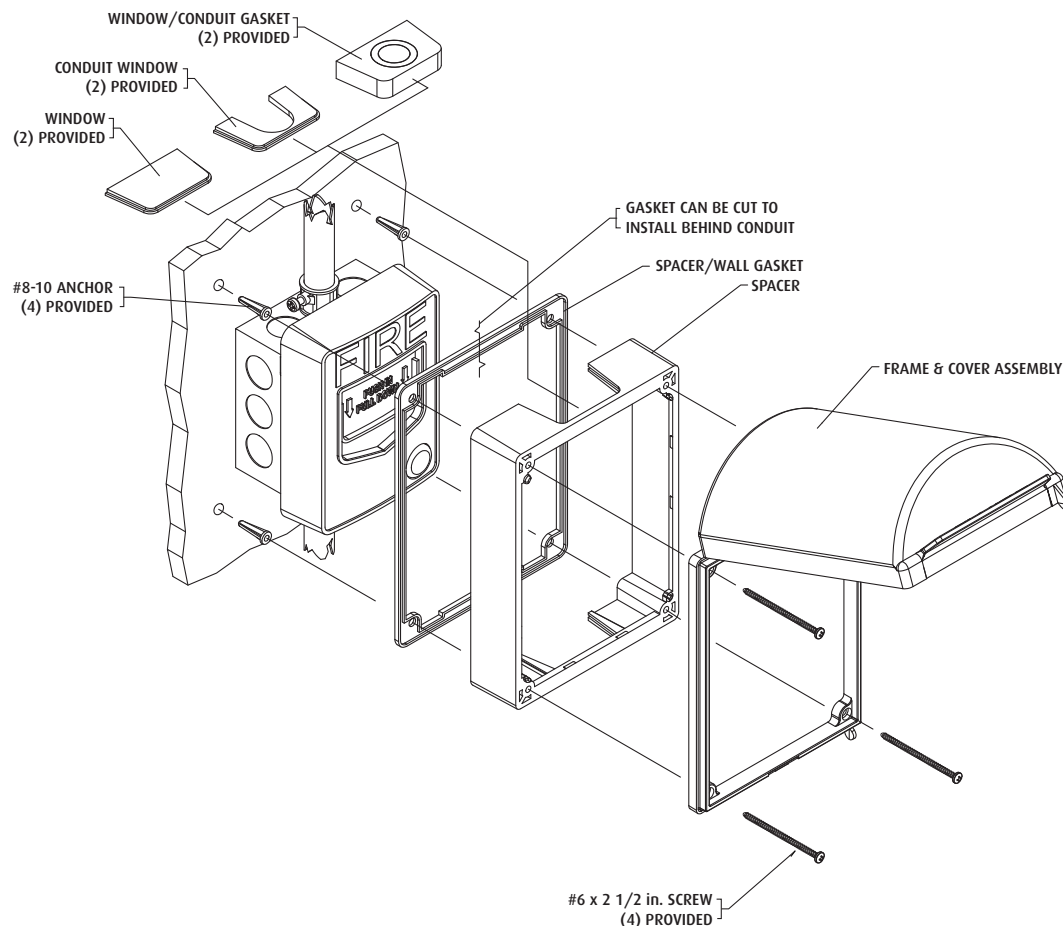

PRODUCT DIMENSIONS

INSTALLATION NOTES

Before drilling mounting holes place spacer, frame and cover over your device. Position it so device functions properly and cover closes with no interference.

1. Remove windows from spacer.
2. Place cover and frame onto spacer. Center over device and transfer hole locations onto wall using an 11/64 drill bit.
3. Remove cover, frame, spacer and drill mounting holes in wall. If using anchors provided, drill holes with 7/32 drill bit. If using only screws provided, drill holes with 7/64 drill bit. Drill all mounting holes 1 in. deep.
4. Cut gasket at center of window opening. Place gasket behind conduit and position cut end of gasket to bottom of device to prevent moisture from entering.
5. Place window, conduit window or conduit gasket into spacer window opening (top and bottom).
6. With cover opened, place full assembly over device and mount with screws provided.

Three year warranty or a one year limited warranty (from date of purchase) on most products. See website for details. Electronic warranty form at www.sti-usa.com/wc14.

INSTALLATION OF STI-1331 UNIVERSAL STOPPER® SPACER

All specifications and information shown were current as of publication and are subject to change without notice.

1331IS APRIL2016