



MaxLite® LED T8 Linear Retrofit Lamps

General Safety Information

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

▲ WARNING

DANGER - RISK OF SHOCK-DISCONNECT POWER BEFORE INSTALLATION.

WARNING - RISK OF FIRE OR ELECTRIC SHOCK. LED RETROFIT KIT INSTALLATION REQUIRES KNOWLEDGE OF LUMINAIRE ELECTRICAL SYSTEMS. IF NOT QUALIFIED, DO NOT ATTEMPT INSTALLATION AND CONTACT A QUALIFIED ELECTRICIAN.

WARNING - RISK OF FIRE OR ELECTRIC SHOCK. PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE OR YOUR LOCAL ELECTRICAL CODE. IF YOU ARE NOT FAMILIAR WITH THESE CODES AND REQUIREMENTS, CONTACT A QUALIFIED ELECTRICIAN.

RISK OF FIRE OR ELECTRIC SHOCK. INSTALL THIS KIT ONLY IN THE LUMINAIRE THAT HAVE THE CONSTRUCTION FEATURES AND DIMENSIONS SHOWN IN THE PHOTOGRAPHS AND/OR DRAWINGS.

WARNING - TO PREVENT WIRING DAMAGE OR ABRASION, DO NOT EXPOSE WIRING TO EDGES OF SHEET METAL OR OTHER SHARP OBJECTS. DO NOT MAKE OR ALTER ANY OPEN HOLES IN AN ENCLOSURE OF WIRING OR ELECTRICAL COMPONENTS DURING KIT INSTALLATION.

WARNING - TO AVOID POTENTIAL FIRE OR SHOCK HAZARD, DO NOT USE THIS RETROFIT KIT IN LUMINAIRE EMPLOYING SHUNTED BI-PIN LAMP HOLDERS. NOTE: SHUNTED LAMP HOLDERS ARE FOUND ONLY IN FLUORESCENT LUMINAIRE WITH INSTANT-START BALLASTS. INSTANT-START BALLASTS CAN BE IDENTIFIED BY THE WORDS "INSTANT START" OR "I.S." MARKED ON THE BALLAST. THIS DESIGNATION MAY BE IN THE FORM OF A STATEMENT PERTAINING TO THE BALLAST ITSELF, OR MAY BE COMBINED WITH THE MARKING FOR THE LAMPS WITH WHICH THE BALLAST IS INTENDED TO BE USED, FOR EXAMPLE F40T12/IS. FOR MORE INFORMATION, CONTACT THE LED LUMINAIRE RETROFIT KIT MANUFACTURER.

INSTALLERS SHOULD NOT DISCONNECT EXISTING WIRES FROM LAMP HOLDER TERMINALS TO MAKE NEW CONNECTIONS AT LAMP HOLDER TERMINALS. INSTEAD INSTALLERS SHOULD CUT EXISTING LAMP HOLDER LEADS AWAY FROM THE LAMP HOLDER AND MAKE NEW ELECTRICAL CONNECTIONS TO LAMP HOLDER LEAD WIRES BY EMPLOYING APPLICABLE CONNECTORS.

WARNING - RISK OF FIRE OR ELECTRIC SHOCK. LUMINAIRE WIRING AND ELECTRICAL PARTS MAY BE DAMAGED WHEN INSTALLING OF RETROFIT KIT HARDWARE. CHECK FOR ENCLOSED WIRING AND COMPONENTS.

WARNING - RISK OF FIRE OR ELECTRIC SHOCK. CHECK THE EXISTING WIRING FOR DAMAGE BEFORE INSTALLING UPGRADE KIT. DO NOT INSTALL IF EXISTING WIRES ARE DAMAGED.

"THIS LUMINAIRE HAS BEEN MODIFIED AND CAN NO LONGER OPERATE THE ORIGINALLY INTENDED LAMP," SHALL BE MARKED ON THE RETROFIT LUMINAIRE WHERE READILY VISIBLE BY THE USER DURING NORMAL MAINTENANCE INCLUDING LAMPING.

DO NOT USE WITH DIMMERS.

SUITABLE FOR DAMP LOCATIONS. SUITABLE FOR USE IN ENCLOSED LUMINAIRE.

THIS DEVICE IS NOT INTENDED FOR USE WITH EMERGENCY EXITS.


THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.



MaxLite® LED T8 Linear Retrofit Lamps

Installation Instructions

1. Make sure the circuit breaker that supplies the power to the fixture is turned off.
2. Remove lens or diffuser cover (if applicable) and existing fluorescent lamps.
3. Open/Remove ballast wiring compartment cover.
4. Identify the line and neutral wires running from the breaker box to the ballast and confirm the power is off using a voltmeter.
5. Cut all wires connected to ballast, and remove ballast (and starter if present). Dispose of removed ballast and fluorescent lamps in accordance with government regulations in your area.
6. Ensure that the fixture contains non-shunted G13 bi-pin lamp holders (**Figure 1**). If socket lamp holders are internally shunted, then replace with new non-shunted socket lamp holders. If socket lamp holders are shunted with a jumper wire, remove wire to convert into non-shunted sockets.
7. MaxLite LED T8 lamps are designed for single sided connections only (**Figure 2**). To install, please wire non-shunted sockets by connecting one wire from the lamp holder to branch circuit L (LIVE) and the other wire at the opposite end to the branch circuit N (NEUTRAL). Do not connect opposite side to power. Use appropriate wires for connection.
8. Make sure all sockets are replaced and wired according to the appropriate wiring diagram. (**Figure 3, 4, 5, 6**).
9. Reinstall the ballast cover to hide all wires.
10. Install your new MaxLite LED T8 replacement lamps.
11. Apply Relamping Label on a visible location inside the fixture.

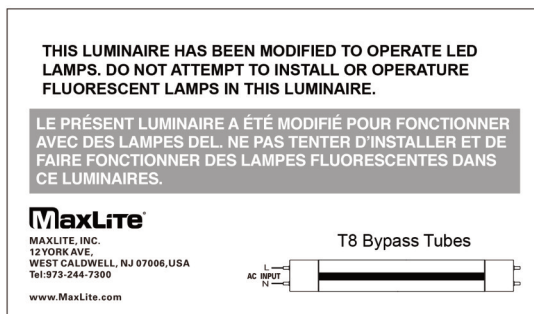

12. Reinstall lens or diffusion cover on the light fixture.
13. Turn power on at the breaker box.
14. Turn on the lights.

LED Lamp Warranty

MaxLite offers a warranty on this product, please see:
<http://www.maxlite.com/resources/warranties>
 for more information.

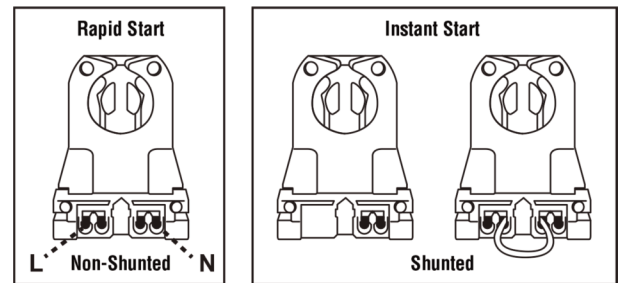


Figure 1. - Non-shunted & Shunted Lamp Holder



Figure 2. - Single sided connection

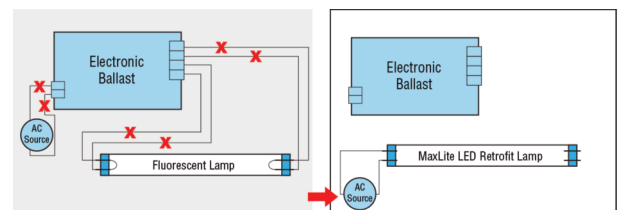


Figure 3. - Retrofit with One Lamp

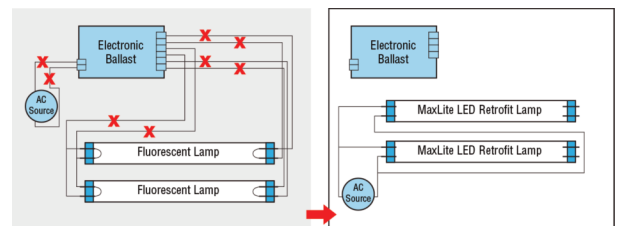


Figure 4. - Retrofit with Two Lamps

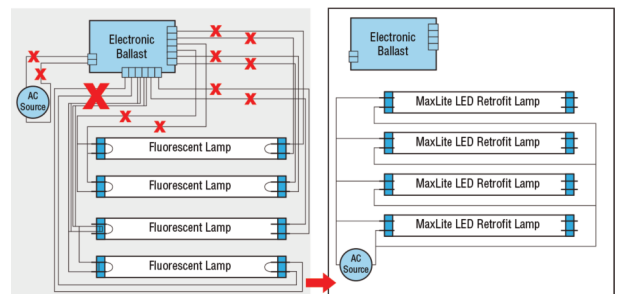


Figure 5. - Retrofit with Three/Four Lamps

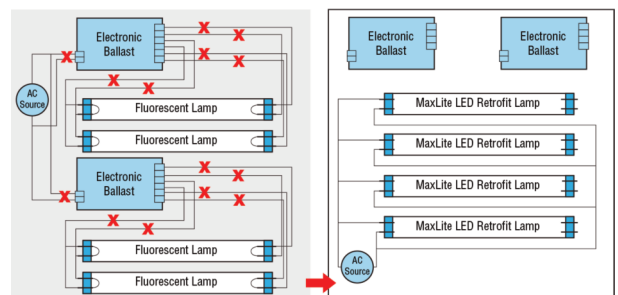


Figure 6. - Retrofit with Three/Four Lamps
& Two Ballasts



MaxLite® LAMPES LINÉAIRES T8 DEL DE MaxLite

Informations générales de sécurité

LIRE ET SUIVRE TOUTES LES CONSIGNES DE SÉCURITÉ

AVERTISSEMENT

DANGER - RISQUE D'INCENDIE ET DE DÉCHARGE ÉLECTRIQUE-DÉBRANCHER AVANT TOUTE INSTALLATION.

AVERTISSEMENT - RISQUE D'INCENDIE ET DE DÉCHARGE ÉLECTRIQUE. L'INSTALLATION D'UN SYSTÈME DEL NÉCESSITE UNE CONNAISSANCE DES SYSTÈMES ÉLECTRIQUES POUR LUMINAIRES. N'ENTREPRENEZ AUCUNE INSTALLATION SI VOUS N'ÊTES PAS QUALIFIÉ. CONTACTEZ UN ÉLECTRICIEN QUALIFIÉ.

AVERTISSEMENT - RISQUE D'INCENDIE ET DE DÉCHARGE ÉLECTRIQUE. N'INSTALLER CE SYSTÈME QUE DANS DES LUMINAIRES AYANT LES CARACTÉRISTIQUES ET LES DIMENSIONS INDICUÉES SUR LES IMAGES ET/OU LES CROQUIS.

AVERTISSEMENT - AFIN D'ÉVITER TOUT RISQUE D'INCENDIE OU DE DÉCHARGE, NE PAS UTILISER CE SYSTÈME POUR DES LUMINAIRES UTILISANT DES DOUILLES DE LAMPE BI-CONTACTS COURT-CIRCUITÉES. NOTE : LES DOUILLES DE LAMPE BI-CONTACTS COURT-CIRCUITÉES SE TROUVENT GÉNÉRALEMENT DANS LES LUMINAIRES FLUORESCENTS AVEC BALLASTS À ALLUMAGE INSTANTANÉ. CES DERNIERS S'IDENTIFIENT PAR LES TERMES « INSTANT START » OU « I.S. ». CES TERMES PRENNENT LA FORME D'UN ÉNONCÉ RELATIF AU BALLAST MÊME OU PEUVENT ÊTRE AJOUTÉS AUX INDICATIONS CONCERNANT LES LAMPES AVEC LESQUELLES LES BALLASTS DOIVENT ÊTRE UTILISÉS (PAR EXEMPLE, F40T12/IS). POUR DE PLUS AMPLES RENSEIGNEMENTS, VEUILLEZ COMMUNIQUER AVEC LE FABRICANT DU SYSTÈME DE LUMINAIRE DEL.

NUL BESOIN DE DÉBRANCHER LES CÂBLES EN PLACE DES TERMINAUX ET NE PAS CRÉER DE NOUVELLES CONNEXIONS AU NIVEAU DES DOUILLES. IL FAUT COUPER LES CÂBLES EXISTANTS ET CRÉER DE NOUVELLES CONNEXIONS À L'AIDE DE CONNECTEURS.

AVERTISSEMENT - RISQUE D'INCENDIE ET DE DÉCHARGE ÉLECTRIQUE. CE PRODUIT DOIT ÊTRE INSTALLÉ CONFORMÉMENT AU CODE DE L'ÉLECTRICITÉ NATIONAL OU CELUI DE VOTRE RÉGION. SI VOUS NE LES CONNAISSEZ PAS, VEUILLEZ CONTACTER UN ÉLECTRICIEN QUALIFIÉ.

AVERTISSEMENT - AFIN D'ÉVITER TOUT DOMMAGE OU ABRASION AU SYSTÈME DE CÂBLES, NE PAS EXPOSER CE DERNIER À DES BORDS DE PLAQUES EN MÉTAL OU À DES OBJETS TRANCHANTS. LORS DE L'INSTALLATION, NE PAS CRÉER D'OUVERTURES AU NIVEAU DES ATTACHES DES CÂBLES NI MODIFIER LES OUVERTURES EXISTANTES.

AVERTISSEMENT - RISQUE D'INCENDIE ET DE DÉCHARGE ÉLECTRIQUE. LES CÂBLES ET LES PIÈCES DU LUMINAIRE PEUVENT ÊTRE ENDOMMAGÉS LORS DE L'INSTALLATION DU SYSTÈME. VÉRIFIER LES CÂBLES ET LES ACCESSOIRES FOURNIS.


AVERTISSEMENT - RISQUE D'INCENDIE ET DE DÉCHARGE ÉLECTRIQUE. VÉRIFIER LE SYSTÈME DE CÂBLE EXISTANT AVANT TOUTE INSTALLATION D'UN NOUVEAU SYSTÈME. NE PAS INSTALLER SI LES CÂBLES EXISTANTS SONT ENDOMMAGÉS.

L'ÉNONCÉ « LE PRÉSENT LUMINAIRE A ÉTÉ MODIFIÉ POUR FONCTIONNER AVEC DES LAMPES DEL. NE PAS TENTER D'INSTALLER ET DE FAIRE FONCTIONNER DES LAMPES FLUORESCENTES DANS CE LUMINAIRE » SERA AJOUTÉ SUR LES SYSTÈMES LORS DES ENTRETIENS DE FAÇON À CE QU'IL SOIT VISIBLE AUX UTILISATEURS.

MaxLite® LAMPES LINÉAIRES T8 DEL DE MaxLite

Consignes d'installation

1. S'assurer que le coupe-circuit qui alimente le système est bien éteint.
2. Retirer la lentille ou le diffuseur (le cas échéant) et les lampes fluorescentes existantes.
3. Ouvrir/retirer le dispositif de fermeture du boîtier des câbles du ballast.
4. Identifier les lignes et les câbles neutres allant de la boîte des disjoncteurs au ballast et s'assurer, à l'aide d'un voltmètre, que le courant a bien été coupé.
5. Couper tous les câbles connectés au ballast, retirer le ballast (et le starter, le cas échéant). Jeter le ballast et les lampes fluorescentes conformément aux règlements de votre région.
6. S'assurer que le dispositif contienne des douilles bi-contacts non court-circuitées G13 (**Figure 1**). Si les douilles sont court-circuitées à l'intérieur, les remplacer par des douilles non court-circuitées. Si les douilles sont court-circuitées à l'aide d'un câble de raccordement, retirer le câble pour une reconversion avec douilles non court-circuitées.
7. Les lampes T8 DEL de MaxLite sont conçues pour des connexions simples uniquement (**Figure 2**). Pour les installer, connecter les douilles non court-circuitées en connectant un câble de la douille vers le circuit L (LIVE) et l'autre à l'opposé vers le circuit N (NEUTRAL). Ne pas connecter les opposés à l'électricité. Utiliser des câbles appropriés pour les connexions.
8. S'assurer de remplacer et connecter toutes les douilles conformément au diagramme de connexion (**Figures 3 4, 5, 6**).
9. Remplacer le dispositif de fermeture du boîtier du ballast de façon à cacher tous les câbles.
10. Installer vos nouvelles lampes T8 DEL de MaxLite.
11. Coller l'étiquette de remplacement sur un côté visite à l'intérieur du luminaire.

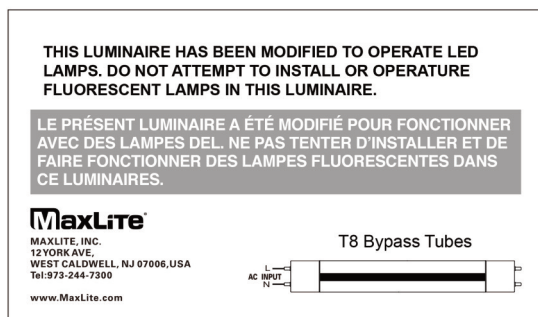

12. Remettre la lentille ou le diffuseur du luminaire.
13. Rétablir le courant au niveau de la boîte des disjoncteurs.
14. Allumer les lumières.

Garantie de lampe DEL

MaxLite offre une garantie sur ce produit. Veuillez consulter le site <http://www.maxlite.com/resources/warranties> pour de plus amples renseignements.

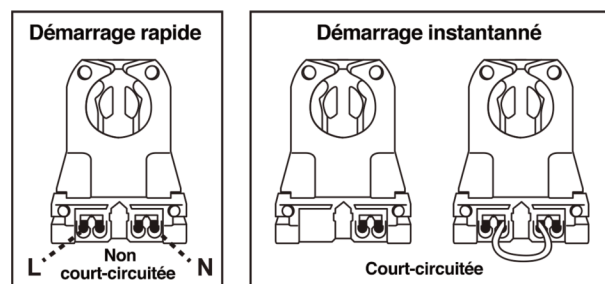


Figure 1. - Douilles non court-circuitée et court-circuitées



Figure 2. - Single sided connection

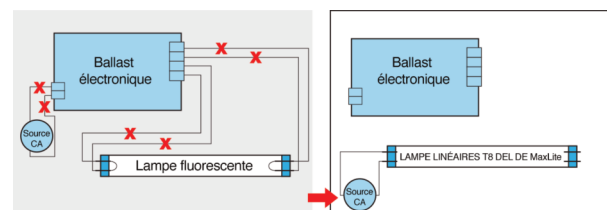


Figure 3. - Installation avec une lampe

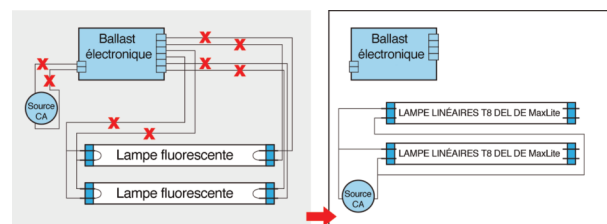


Figure 4. - Installation avec deux lampes

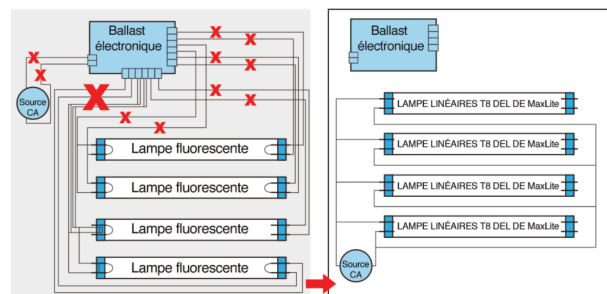


Figure 5. - Installation avec trois/quatre lampes

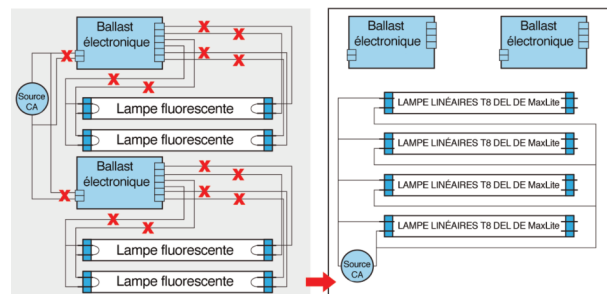


Figure 6. - Installation avec trois/quatre lampes et deux ballasts