

INSTALLATION INSTRUCTIONS

JUNO IC20LEDG3, IC920LEDG3, IC22LEDG3 & IC922LEDG3 **NEW CONSTRUCTION RECESSED HOUSINGS**

WARNING: For your safety, read and understand instructions completely before starting installation. Before wiring to power supply, turn off electricity at the fuse or circuit breaker box.

NOTE: Juno recessed fixtures are designed to meet the latest NEC requirements and are listed in full compliance with the relevant UL standard(s). Before attempting installation of any recessed lighting fixture, check your local electrical building code. This code sets the wiring standards and installation requirements for your locality and should be understood before starting work. Use of non-Juno trims voids Juno warranty.

SAVE THESE INSTRUCTIONS

TYPE IC FOR INSULATED CEILINGS




Figure 1

Juno Type IC fixtures are designed for direct contact with insulating materials which are approved for this application (Fig. 1). Fixtures may also be used in non-insulated ceilings.

Juno Air-Loc LED housings are supplied with pre-installed gaskets for energy savings and to comply with energy code air leakage requirements per ASTM E283.

INSTALLATION INTO JOIST CONSTRUCTION


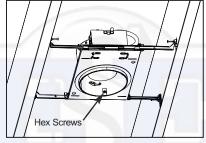


Figure 2



(Note: Bar hanger may be shortened to fit 12" framing or smaller by breaking at score lines).

Step 2. Slide fixture along bar hangers into desired location. Use locking screws or slot to secure (Fig. 4).

Relocating Fixture – Nail can be removed with hammer claw to allow easy repositioning of fixture without damaging bar hanger or nail (Fig. 5).

Step 3. Follow steps 1-4 under Electrical Connection.

Step 4. When installing in drywall, cut appropriate sized hole.* After installing drywall, if necessary, adjust fixture for ceiling thickness by loosening the three hex screws that attach

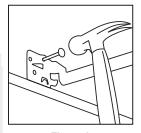


Figure 3

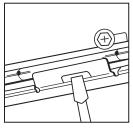


Figure 4

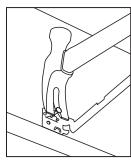


Figure 5



the round housing to the plaster frame (Fig. 2).

^{*} Note: Cut 5-5/8" (for 5" housings) or 6-7/8" (for 6" housings) opening.



INSTALLATION INSTRUCTIONS

JUNO IC20LEDG3, IC920LEDG3, IC22LEDG3 & IC922LEDG3 NEW CONSTRUCTION RECESSED HOUSINGS

INSTALLATION INTO SUSPENDED CEILING

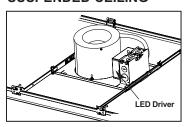



Figure 6

Step 1. Locate center of proposed opening on ceiling tile and cut appropriate sized hole.*

Step 2. Place ceiling tile in T-bar grid.

Step 3. Place fixture into position and snap bar hanger foot with integral T-bar notch onto T-bars (Fig. 6). Additional holes provided for securing with wire or screws (Fig. 7).

Step 4. Follow Steps 1-4 under Electrical Connection.



* Note: Cut 5-5/8" (for 5" housings) or 6-7/8" (for 6" housings) opening.

Figure 7

FIXTURE DIMMING

IC20LEDG3-XXX-U, IC920LEDG3-XXX-U, IC22LEDG3-XXX-U & IC922LEDG3-XXX-U: Universal input voltage (120VAC thru 277VAC) housings. Dimmable with the use of most 0-10V wall box dimmers.

IC20LEDG3-XXX-1, IC920LEDG3-XXX-1, IC22LEDG3-XXX-1 & IC922LEDG3-XXX-1

120VAC input voltage housings. Dimmable with the use of most incandescent, magnetic low voltage or electronic low voltage* wall box dimmers

Consult Juno Product Services or website for compatibility.

*Electronic low voltage dimmers require a neutral wire connection in the wall box.

ELECTRICAL CONNECTION INSTRUCTIONS




Figure 8

Step 1. Provide electrical service according to your local electrical code to the wiring box located on the plaster frame. Supply wire insulation must be rated for at least 90°C.

Step 2. Remove wiring box cover. Remove the appropriate knock-out(s) to accommodate the type of electrical service to be used/allowed by your local electrical code (Fig. 8):

Metal Conduit. Remove appropriate round knock-out(s) and connect conduit to wiring box with proper connectors (not supplied).

12/2 or 14/2 Non-Metallic Sheathed Cable (Type NM-B). Remove appropriate D-shaped cable knock-out(s). Insert NM-B cable through cable trap and make a 90° L-shaped bend in cable as shown (Fig. 9).

12/3 or 14/3 Cable (Type NM-B). Remove appropriate round knockouts and connect cable with proper electrical connectors (not supplied and not shown).

Step 3. Strip supply wire 3/8" and insert each supply wire into appropriate connector. Connect black fixture wire to hot, white fixture wire to neutral and green fixture wire to ground. (Fig. 8).

Connect violet (+) and gray (-) dimmer wires (-U models only).

Step 4. Place all wiring and connectors back in wiring box and replace cover.

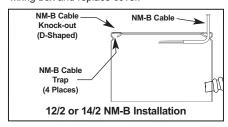


Figure 9

DRIVER REPLACEMENT

Driver replacements must be performed by a qualified electrician. Remove inner housing from fixture to access driver. Order replacement kits as identified on the driver. The replacement kits include detailed instructions for driver replacement.

TRIM INSTALLATION

After ceiling is finished and painted, remove paint shield from fixture. Discard or recycle. To install trims using COIL SPRINGS remove OPTIC REFLECTOR by rotating 1/4 turn counter-clockwise (Fig. 10). Connect trim springs to fixture L-BRACKETS as shown (Fig. 11). Take note of flange details at top of OPTIC REFLECTOR, align and insert in fixture and rotate 1/4 turn clockwise until it stops.

To install trims with TORSION SPRINGS it is not necessary to remove OPTIC REFLECTOR.

For lensed trims equipped with an internal reflector, remove the reflector supplied with the trim and discard or recycle.



Figure 10

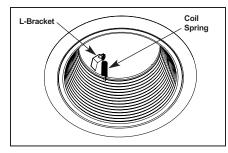


Figure 11

WARRANTY

Juno Lighting Group provides five year limited warranty on LED components from date of purchase. Juno Lighting Group's obligation is expressly limited to repair or replacement, without charge, at Juno Lighting Group's factory after prior written return authorization has been granted. This warranty shall not apply to products which have been altered or repaired outside of Juno Lighting Group's factory. This warranty is in lieu of all other warranties, expressed or implied, and without limiting the generality of the foregoing phrase, excludes any implied warranty of merchantability. Also, there are no warranties which extend beyond the description of the product on the company's literature setting forth terms of sale.

Product Services Phone (888) 387-2212

