

# INSTRUCTIONS

## STRP-LED™ INSTALLATION

# RAB®

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: [marketing@rablighting.com](mailto:marketing@rablighting.com)



STRP210



STRP420



STRP220



STRP440

### IMPORTANT

#### READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

**WARNING: Disconnect or turn OFF power at the electrical panel before installing or maintaining fixture. No User serviceable parts inside fixture.**

### SURFACE MOUNTING

The fixture is suitable for indoor applications for ceiling mounting, as follows:



1. Remove **LED Cover** by pushing in/squeezing the fixture's sides and lifting the **LED Cover** to disengage.
2. Locate the line voltage input wires near one of the **Knockouts**. Remove the corresponding **Knockout** to access the fixture's leads. Pull supply wires through the **Knockout** and secure with proper hardware (*by others*).
3. Securely mount the **Housing** directly to a sturdy surface using the correct mounting hardware through the **Drill Locations**, (2 places minimum). See **Fig. 1**. The **J-Box Adapter** (*ordered separately as JBSTRP, on 4' units only*) is used to cover the Junction Box (*by others*).
4. Use correct UL-rated wire connectors as required by the National Electric Code to make electrical splices to fixture leads.
5. Connect the **Connectors**, tidy up the leads, and secure the **LED Cover** to the **Housing**.

**WARNING: To prevent wiring damage or abrasion, do not expose wiring to sharp objects.**

### SUSPENDED MOUNTING

The fixture can be mounted using **S-hooks** (*ordered separately as STRP SHOOK*).

1. Mount **S-hooks** (*two S-hooks for the single tube, four S-hooks for the double tube*) to the fixture as shown in **Fig. 2**.
2. For electrical wiring, follow steps 1, 2, and 4 above.

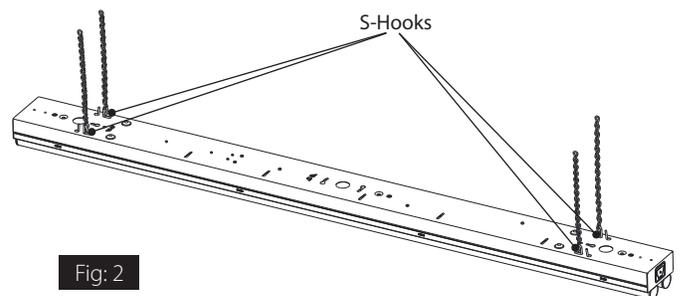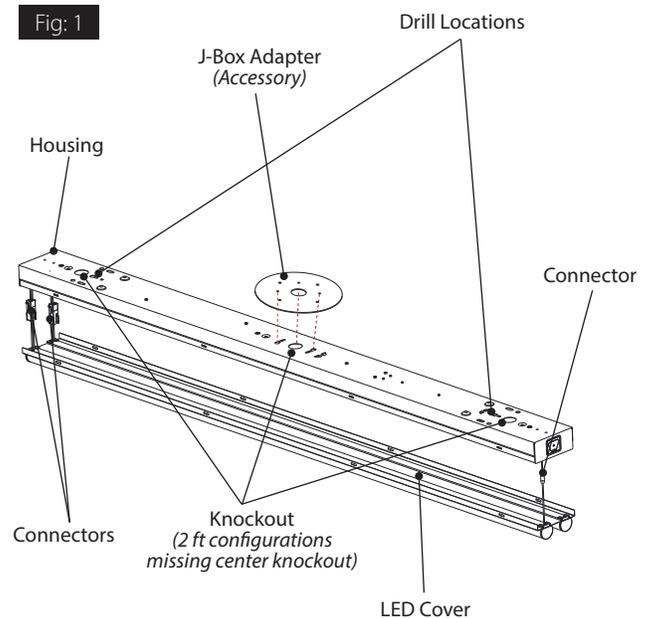

# INSTRUCTIONS

## STRP-LED™ INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: [marketing@rablighting.com](mailto:marketing@rablighting.com)

### CONTINUOUS RUN MOUNTING


Multiple fixtures can be mounted together:

1. For continuous runs, remove **Joiner Port** cover. Plug together **Fixtures** using the **Joiner Connector** between fixtures for quick connect installation (Fig. 3). Only the first **Fixture** needs to be electrically hardwired from above. For suspended mount, join every two adjacent **Fixtures** by attaching a **Plate** using four screws as shown in Fig. 3. If surface mounted, all joined **Fixtures** must be mechanically secured to the mounting surface and are not required to be attached to a **Plate** with four screws.
2. **NOTE:** The **Joiner Port** at each end of the **Fixtures** is marked "A" or "B"; please note that the "A" connector must be inserted in to the "B" end of the following fixture and vice versa.
3. **CAUTION:** The maximum number of fixtures allowed to be linked together is indicated in the below table. xx represents color temperature 3500K and may be replaced by 40 (4000K) or 50 (5000K).

Catalog #	Maximum Number of Linked Fixtures
STRP210-8xx	Up to 30 fixtures
STRP220-8xx	Up to 25 fixtures
STRP420-8xx	Up to 25 fixtures
STRP440-8xx	Up to 15 fixtures

**WARNING:** To prevent wiring damage or abrasion, do not expose wiring to sharp objects.

Fig. 3

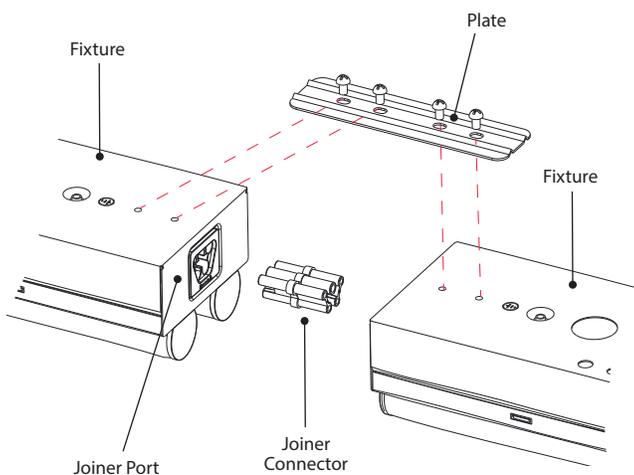


### 0-10V DIMMABLE WIRING

**RISK OF FIRE.** Universal voltage driver permits operation at 120V thru 277V, 50 or 60 Hz. For 0-10V dimming, follow the wiring directions in Fig. 4.

1. Connect the black fixture lead to the LINE supply lead.
2. Connect the white fixture lead to the COMMON supply lead.
3. Connect the green GROUND wire from fixture to supply ground.
4. Connect the purple fixture lead to the (V+) DIM lead.
5. Connect the gray fixture lead to the (V-) DIM lead.
6. Cap the yellow fixture lead, if present. Do NOT connect.

Fig. 4

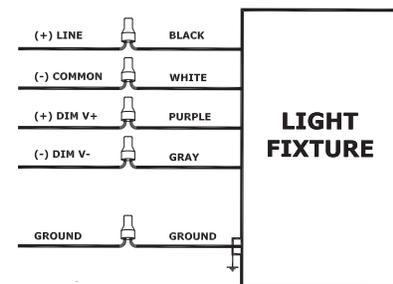

### CLEANING & MAINTENANCE

**CAUTION:** Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

1. Clean polycarbonate lens with non-abrasive cleaning solution.
2. Do not open the fixture to clean the LEDs. Do not touch the LEDs.

### TROUBLESHOOTING

1. Check that the line voltage at the fixture is correct. Refer to wiring directions in Fig. 4.
2. Be sure the fixture is grounded properly.

**Note:** These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.



#### Easy Answers

[rablighting.com](http://rablighting.com)  
Visit our website for product info

**Tech Help Line**  
Call our experts: 888 722-1000

**e-mail**  
Answered promptly - [sales@rablighting.com](mailto:sales@rablighting.com)

**Free Lighting Layouts**  
Answered online or by request