

### **SAFETY & WARNINGS**

- 1.Install in accordance with national and local electrical code regulations.
- 2. This product is intended to be installed and serviced by a qualified, licensed electrician.
- 3.Do not modify or disassemble this product beyond instructions or the warranty will be void.
- 4.Do not submerge, or install within 5 feet of a swimming pool.
- 5.All plastics are affected by the elements and may shift in color and other properties after product installation, particularly with direct exposure to sun, chlorinated water, and other chemicals.
- 6. Only install with a Listed Class 2 DC LED driver.
- 7. To avoid Voltage Drop, ensure wire gauge used with LED Strip Light is sufficient to keep under 3% voltage drop.
- 8.Do not exceed maximum run recommended for Strip Light.
- 9. Diode LED Strip Light is designed to be cut at designated cut points only. Cutting anywhere other than the cut points will result in damage to the Strip Light.
- 10. Failure to follow safety warnings, and installation instructions will void the warranty for this product.



## **QUICK SPECS**

Input Voltage			
Power Consumption			
Maximum Run	See Package Label		
Environment			

Included Models 1	DI-12V-**, DI-24V-**
Ambient Temperature <sup>2</sup>	-4° ~ 122°F (-20° ~ 50°C)


Note <sup>1</sup> \*\* Indicates luminaire family, CCT, CRI, length.

Note <sup>2</sup> Do not install product in an environment outside the listed ambient temperature.

## A WARNING!

### DO NOT CONNECT DIRECTLY TO HIGH VOLTAGE POWER!

Read all warnings and installation instructions thoroughly.

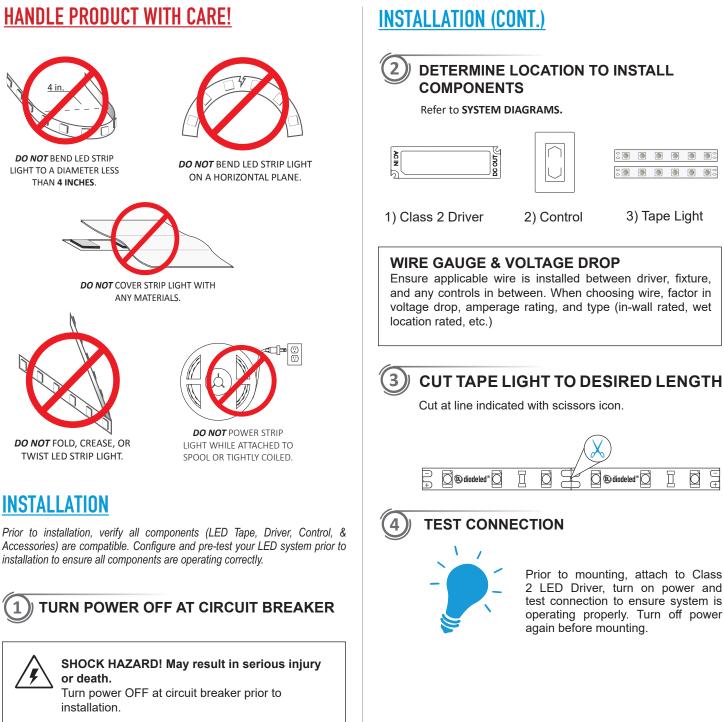


INSTALLATION GUIDE

Ē


3) Tape Light

### INSTALLATION GUIDE

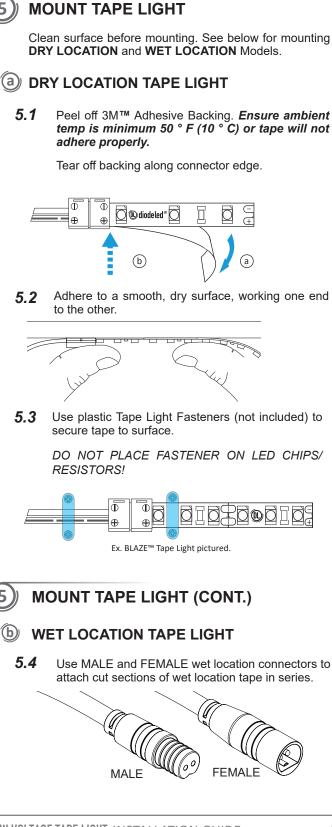


**INSTALLATION (CONT.)** 

**5.5** All cut sections must be sealed with *non-acidic neutral silicone sealant/adhesive* (Diode SKU: DI-WPSL not included), and wet location end caps. Acidic-based adhesives may damage the phosphor of LED chips.

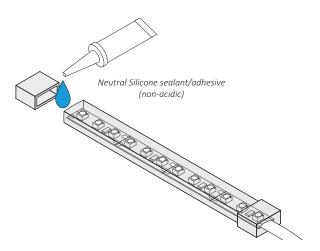

**5.6** Mount with included mounting clips/screws. Silicone adhesive can also be utilized to mount tape to surfaces.

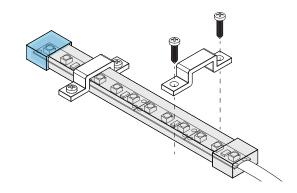



#### ATTACH DRIVER AND LIGHTING CONTROL

**ONLY USE COPPER WIRING.** See **SYSTEM DIAGRAMS** on pages 6-7. Verify a compatible driver and control are installed.






REVIEW FULL SYSTEM and ensure all polarities are correct and connections are secure.

INSTALLATION GUIDE

### **INSTALLATION (CONT.)**



TURN POWER ON AT CIRCUIT BREAKER

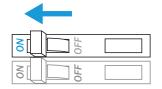

### SYSTEM WORKING IMPROPERLY?

Turn power OFF at circuit breaker and verify all connections. Review SYSTEM DIAGRAMS and TROUBLESHOOTING or call Diode LED Technical Support at 877.817.6028.

## **CLICKTIGHT INSTALLATION**

CLICKTIGHT LOAD LIMIT 12VDC: 60W, 5A/24VDC: 100W, 4.17A


### **CLICKTIGHT COMPATIBILITY**



### **CUT TAPE LIGHT**

1

Cut at line indicated with scissors icon.

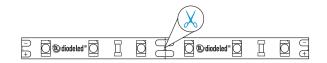


## **CLICKTIGHT INSTALLATION (CONT.)**



) INSERT TAPE LIGHT INTO CLICKTIGHT

Determine orientation of tape light for correct polarity.

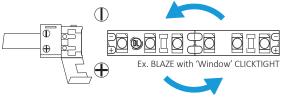


Determine orientation of tape light for correct polarity.



Remove 3M<sup>™</sup> adhesive backing and insert tape light into connector and close connector.


Note: Contact/solder points of tape light MUST be <u>directly</u> <u>underneath metal conductors</u> of CLICKTIGHT. **DO NOT place tape light on top of metal conductors!** 

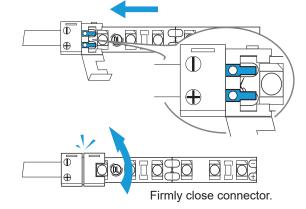

3) MC

### MOUNT TAPE LIGHT

Install on a smooth, finished, dry surface. Prep surface to removed dust and dirt before mounting.

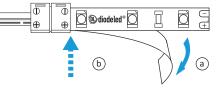

Remove 3M<sup>™</sup> adhesive backing.
 Tear off along connector edge (this allows for a tighter


2) Tear off along connector edge (this allows for a tighter fit for 'No Window' models). Mount tape light to surface, working one end to the other.

## **DOUBLE BLAZE CONNECTOR INSTALLATION**

These instructions apply only to Double LED Tray Connectors. Never cut tape attached to a live circuit. Do not exceed Class 2 Limit when loading Double Blaze Connectors.



Cut at the line indicated with scissors icon.

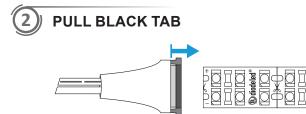


Gently pull out the black tab 1-2mm. Note the +/- polarity markings of the tape light.




### **INSERT TAPE LIGHT INTO CONNECTOR**

Firmly insert with 3M<sup>™</sup> Adhesive backing still intact to Tape Light.

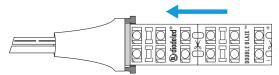

Ensure contact/solder points of tape light are directly underneath white/gray tab of connector tray.

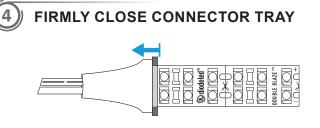

Proceed to **INSTALLATION - STEP 4 - TEST CONNECTION** on page 2.

#### INSTALLATION GUIDE

### **VALENT X CONNECTOR INSTALLATION**


These instructions apply only to Valent X Connectors. Never cut tape attached to a live circuit. Do not exceed Class 2 Limit when loading Valent X Connectors.





Cut at the line indicated with scissors icon.

2) OPEN CONNECTOR

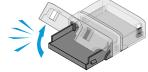



**Gently pull open connector window.** Note the +/- polarity markings of the tape light.



#### **INSERT TAPE LIGHT INTO CONNECTOR**

Firmly insert with 3M<sup>™</sup> Adhesive backing still intact to Tape Light.

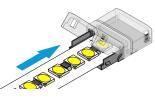

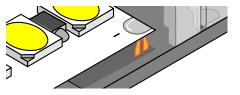

Ensure contact/solder points of tape light are directly over connection prongs within connector.





*Ensure connection prongs pierce completely through Valent X LED Tape Light.* 

Proceed to **INSTALLATION - STEP 4 - TEST CONNECTION** on page 2.

INSTALLATION GUIDE

## **TROUBLESHOOTING**

Symptom	Common Cause
Tape Light does not illuminate	Circuit breaker is OFF or tripped.
	<ul> <li>Incorrect wiring. Polarity of Low Voltage V+ and V- are reversed. Check connection at every connection point to ensure polarity is not reversed.</li> </ul>
	• Incorrect voltage pairing of LED driver and fixture. 12V driver models will not power a fixture with a higher voltage rating.
Tape Light Overheats	<ul> <li>Incorrect voltage pairing of LED driver and fixture. Ensure 12V tape light models are not paired with a driver with higher voltage.</li> </ul>
	• Incorrect ambient temperature. Ensure tape light is installed in environment -4° ~ 122°F (-20° ~ 50°C).
Fixture flickers randomly, may shut off	<ul> <li>Connection is not secure. Check connection at CLICKTIGHT and ensure metal prongs of CLICKTIGHT are directly on top of Tape Light Solder pads.</li> </ul>
Shift in brightness and/ or color	• Review Tape Light maximum series run limit. Exceeding will cause voltage drop, decreasing brightness and/or color shift.
	• Review Voltage Drop Charts on pg. 8. Incorrect wire gauge may cause voltage drop and noticeable shift in brightness and/or color.
Tape Light turns on/off repeatedly	Driver is overloaded or overheated. An overloaded/overheated driver will trip the internal auto-reset (of driver) repeatedly, turning the system on/off.
CLICKTIGHT Connectors	Ensure compatible CLICKTIGHT models are attached. Tape lights vary in width and require specific connectors. Contact your supplier for additional information.
	Tape Light is polarity sensitive. Ensure V+ of power is attached to V+ of tape light. Ensure V- of power is attached to V- of tape light.

## **VOLTAGE DROP CHARTS**

For best performance and lumen output, ensure proper wire gauge is installed to compensate for voltage drop of low voltage circuits.

	<b>5 W</b> .42 A 27 ft.	10 W .83 A	20 W 1.7 A	30 W 2.5 A	40 W 3.3 A	50 W 4.1 A	60 W 5 A
	27 ft.	4.4.6					JA
22 AWG		14 ft.	7 ft.	4.5 ft.	3.5 ft.	2.8 ft.	2.2 ft.
20 AWG	43 ft.	18 ft.	9 ft.	6 ft.	5 ft.	4 ft.	3 ft.
18 AWG	68 ft.	34 ft.	17 ft.	11 ft.	8 ft.	6 ft.	5 ft.
16 AWG	110 ft.	54 ft.	27 ft.	18 ft.	13 ft.	10 ft.	9 ft.
14 AWG	170 ft.	86 ft.	43 ft.	29 ft.	21 ft.	17 ft.	14 ft.
12 AWG	275 ft.	134 ft.	68 ft.	45 ft.	34 ft.	27 ft.	22 ft.
10 AWG	430 ft.	199 ft.	99 ft.	66 ft.	49 ft.	39 ft.	33 ft.

### 12V Voltage Drop & Wire Length Distance Chart

### 24V Voltage Drop & Wire Length Distance Chart

Wire Gauge	5 W .2 A	10 W .42 A	20 W .83 A	30 W 1.3 A	40 W 1.7 A	50 W 2.1 A	60 W 2.5 A	70 W 2.9 A	80 W 3.3 A	90W 3.75 A	100 W 4. 2 A
22 AWG	107 ft.	52 ft.	27 ft.	17 ft.	13 ft.	10.5 ft.	9 ft.	7.5 ft.	6.8 ft.	6 ft.	5.3 ft.
20 AWG	170 ft.	85 ft.	43 ft.	27 ft.	21 ft.	17 ft.	14 ft.	12 ft.	11 ft.	9 ft.	8 ft.
18 AWG	270 ft.	134 ft.	68 ft.	45 ft.	33 ft.	27 ft.	22 ft.	19 ft.	17 ft.	15 ft.	14 ft.
16 AWG	430 ft.	215 ft.	109 ft.	72 ft.	54 ft.	43 ft.	36 ft.	31 ft.	27 ft.	24 ft.	22 ft.
14 AWG	680 ft.	345 ft.	174 ft.	115 ft.	86 ft.	69 ft.	57 ft.	49 ft.	43 ft.	39 ft.	36 ft.
12 AWG	1090 ft.	539 ft.	272 ft.	181 ft.	135 ft.	108 ft.	90 ft.	77 ft.	68 ft.	61 ft.	56 ft.
10 AWG	1730 ft.	784 ft.	397 ft.	263 ft.	197 ft.	158 ft.	131 ft.	112 ft.	98 ft.	97 ft.	82 ft.

### Voltage Drop Chart Guide

1

Determine load size. Let's assume load is 55 W. Round up to nearest load.

Determine distance from driver to load. Let's assume the distance is 20 ft.

It's recommended to install 12 AWG to eliminate excess voltage drop.


#### INSTALLATION GUIDE

### **SYSTEM DIAGRAMS**


The following diagrams are provided as example system designs. For information regarding larger systems or systems not pictured below, please see our web page or contact technical support. Always review each component installation guide for detailed and up-to-date wiring instructions. Install in accordance with national and local electrical codes.

### SINGLE COLOR CONTROL SYSTEMS


#### **Traditional ON/OFF Switch System**

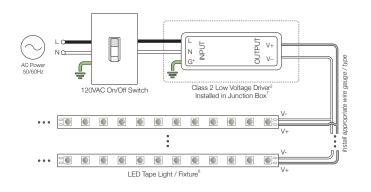


#### OMNIDRIVE<sup>®</sup> Electronic Dimmable Driver System

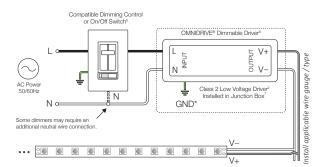

### SWITCHEX<sup>®</sup> Dimmer/Driver System

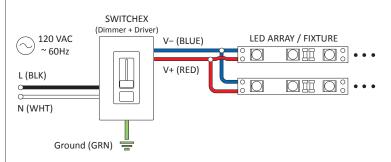

### **REIGN® 24V Dimmer System**

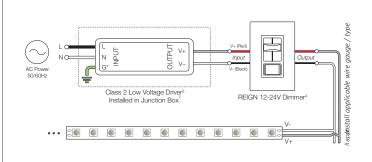

1. Driver may not require a fault ground connection. Refer to driver specifications for additional information.

2. Install a compatible Class 2 constant voltage driver. Refer to each driver specification sheet for full power ratings & load deratings.

3. Install a Class 2 constant voltage driver compatible with a low voltage PWM controller/dimmer switch. Refer to each driver specification sheet for full power ratings & load deratings.

4. Determine the number of low voltage outputs of the driver when installing multiple PWM controllers/dimmer switches. No more than one PWM controller/dimmer switch can be attached to a single output of the driver.


5. Install a compatible dimming control or switch. See the 'Electronic Dimmable Driver / Dimmer Compatibility List' for compatible dimming controls. See the dimming control manufacturer installation guide for complete wiring instructions.

- 6. Ensure to load the driver at least 60% of the labeled load for proper dimming performance (required for dimmable installations only).
- 7. Refer to driver or controller specifications for a compatible junction box.
- 8. See fixture specifications for maximum series run limits.


INSTALLATION GUIDE

### **SYSTEM DIAGRAMS (CONT.)**

### **RGB/RGBW COLOR CONTROL SYSTEMS**

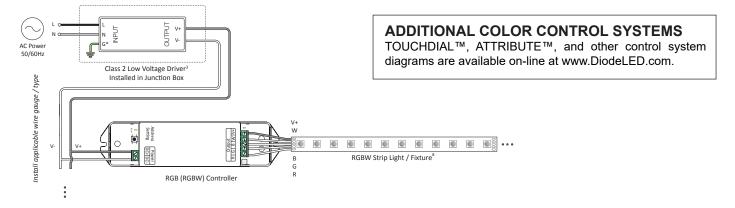

#### DMX CONTROL SYSTEM

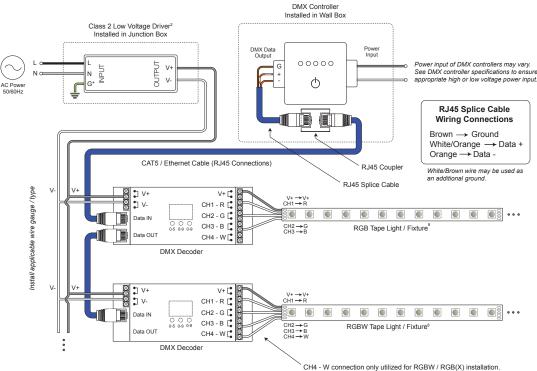

## **ADDITIONAL RESOURCES**

Visit the on-line product page at <u>www.DiodeLED.com</u> for individual LED Tape Light product specifications & warranty information.



Toll Free: 877.817.6028 | Fax: 415.592.1596 | www.DiodeLED.com | info@DiodeLED.com © 2018 Elemental LED, Inc. All rights reserved. Specifications are subject to change without notice.