ENGLISH

TO INSTALL:
WARNING: TO BE INSTALLED AND/OR USED IN ACCORDANCE WITH APPROPRIATE ELECTRICAL CODES AND REGULATIONS.
WARNING: IF YOU ARE NOT SURE ABOUT ANY PART OF THESE INSTRUCTIONS, CONSULT AN ELECTRICIAN.
CAUTION: USE THIS PRODUCT WITH COPPER OR COPPER CLAD WIRE ONLY.
NOTE: For use with #10 AWG thru #4 AWG wire.

1. **WARNING:** TO AVOID FIRE, SHOCK, OR DEATH; **TURN OFF POWER** AT CIRCUIT BREAKER OR FUSE AND TEST THAT THE POWER IS OFF BEFORE WIRING!
2. Remove insulation from wire per strip gage as shown on back of device, approximately 1/2 inch (1.3 cm).
3. Determine appropriate terminal for each wire per **wiring diagram**.
4. Insert wires into proper terminals **(refer to wiring diagram)**. Tighten terminal screws to 25 in.-lbs. of torque. **CAUTION:** Terminal screws must tighten onto conductor only, not insulation.
5. Fold the wires into the box, keeping the grounding wire away from the WHITE and HOT terminals.
6. Mount device using long mounting screws. Attach wallplate (sold separately).
7. Restore power to circuit breaker or fuse.Installation is complete.
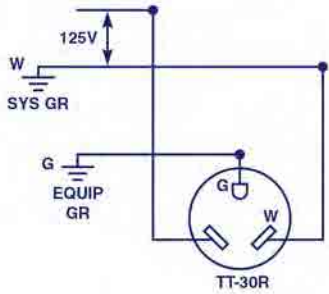
Installation is complete.