

WPTLED™ TALLPACK® INSTALLATION INSTRUCTIONS



Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000 or email: marketing@rabweb.com



IMPORTANT

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF before installing or maintaining fixture. No user servicable parts inside.

CAUTION: For proper weatherproof function all gaskets must be seated properly and all screws inserted and tightened firmly. Apply weatherproof silicone sealant around the edge of the Wall Box and/or Junction Box. This is especially important with an uneven wall surface. Silicone all plugs and unused conduit entries.

MOUNTING TO JUNCTION BOX/ WALL

1. Loosen the **Bottom Screws (2)** and open the **Housing**.
2. Knock out appropriate slots in **Knockout Pattern**, secure to **Junction Box (not supplied)** with appropriate hardware. Check gasket is fully sealed. Feed supply wires through **Junction Box** into **Wall Mounting Box** through **Silicone Wiring Plug**.
3. Alternatively, secure **Wall Mounting Box** to a sturdy wall. Use appropriate mounting hardware such as lag bolts and anchors with washers suitable for the mounting surface. Use **Conduit Entries** and conduit connectors according to NEC and local codes.
4. Check the gasket is fully sealed. Silicone around the edge of **Wall Mounting Box** and/ or **Junction Box**.
5. Place wired **Housing** over the **Wall Mounting Box**, close and tighten the **Bottom Screws**. Check **Door Gasket** is properly sealed.
6. Tighten **Plugs** and apply weatherproof silicone sealant to all unused **conduit entry** points. If outdoor surface is irregular, use caulk to seal any gaps around **Wall Mounting Box**.

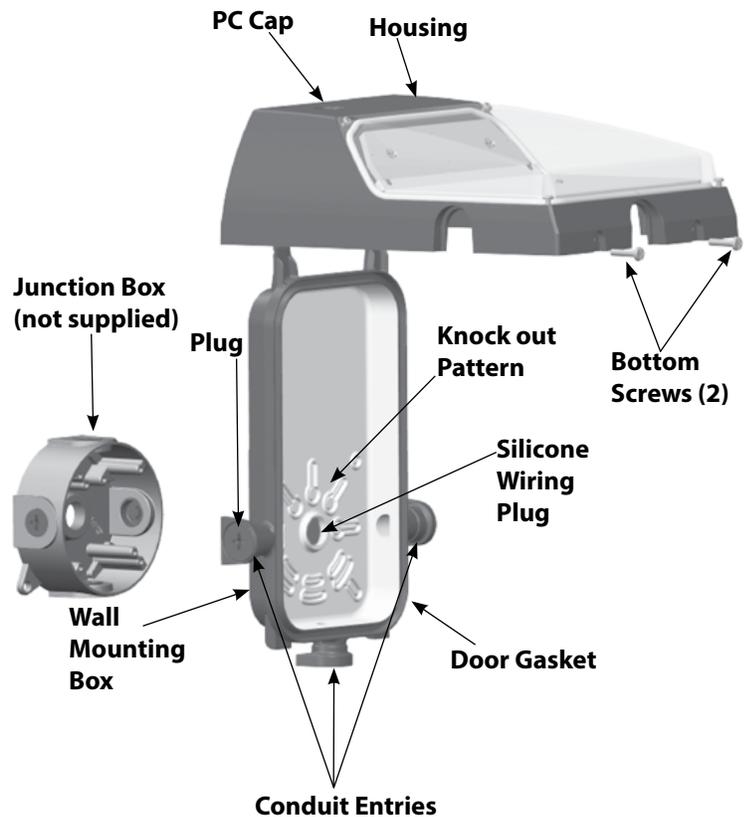


Fig. 1

WPTLEDTM TALLPACK[®] INSTALLATION INSTRUCTIONS



Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000 or email: marketing@rabweb.com

PHOTOCELL CAP

1. For photocell use, remove **PC Cap** (shown in Fig. 1).
2. For full time operation, cover Photocell with provided black silicone PC Cap.

CLEANING & MAINTENANCE

CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

1. Clean glass lens & fixture with non-abrasive glass cleaning solution.
2. Do not open fixture to clean the LED. Do not touch the LED.

TROUBLESHOOTING

1. Check that the line voltage at fixture is correct. Refer to wiring directions.
2. Is the fixture grounded properly?

0-10V DIMMABLE WIRING

Universal voltage 0-10V Dimming driver permits operation at 120V thru 277V, 50 or 60 Hz. Fixtures come standard with 120V thru 277V, 50/60Hz Photocell. For 0-10V Dimming, follow the wiring directions below (as shown in Fig. 2.)

1. For Junction Box Mount, feed wires through silicone wiring plug into the Wall Mounting Box.
2. Connect the black fixture lead to the LINE supply lead.
3. Connect the white fixture lead to the COMMON supply lead.
4. Connect the GROUND wire from fixture to supply ground. Do NOT connect the GROUND of the dimming fixture to the output.
5. Connect the purple fixture lead to the (V+) DIM lead.
6. Connect the gray fixture lead to the (V-) DIM lead.
7. Cap the yellow fixture lead, if present. Do NOT connect.

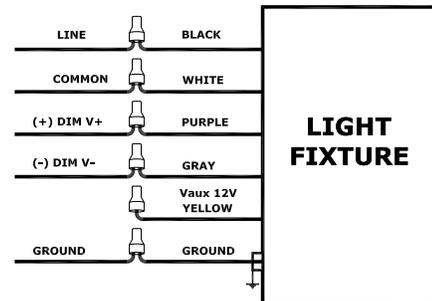


Fig. 2

PATENT - **Pending:** Pat. Pending

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation operation or maintenance.



WPTLED IN 1215

Easy Installation & Product Help

Tech Help Line
Call our experts 888 RAB-1000

rabweb.com
Visit our website for product info

email
Answered promptly sales@rabweb.com