

Installation Instructions for the Sure-Lites AEL2 Wall Sconce Emergency Light Suitable for Wet Locations, -30°C (-22°F) to +50°C (122°F) Ambient

⚠ WARNING

Risk of Fire/Electric Shock

If not qualified, consult an electrician.

⚠ WARNING

Risk of Electric Shock

Disconnect power at fuse or circuit breaker before installing or servicing.

Important Safeguards


WHEN USING ELECTRICAL EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE OBSERVED INCLUDING THE FOLLOWING.

1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS
2. Do not use in hazardous locations, or near gas or electric heaters.
3. Do not let power supply cords touch hot surfaces.
4. Do not use this equipment for other than the intended use.
5. Installation is to be performed only by qualified personnel.
6. Install in accordance with National Electric Code and local regulatory agency requirements.

7. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
8. Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
9. SAVE THESE INSTRUCTIONS

Installation

1. De-energize the circuit at the junction box (J-box) where the emergency light is to be installed.
2. Remove housing from base by placing a flat head screwdriver in the two slots on the side and turning.
3. Remove the inner enclosure by placing a flat head screw driver under the two snap latches and pry off. Remove the plug from the test button and indicator light as the inner enclosure is pulled away.
4. For wall mounting to an outlet box, knock out the appropriate mounting pattern on the base and back gasket to match the junction box being used. Route wire approximately 2 inches through wire access hole and back gasket. Securely fasten the mounting base and back gasket with screws to the junction box.
5. When mounting the AEL2 on uneven masonry surfaces such as brick or stucco, the base should be sealed properly with silicone caulking to prevent water from seeping in.
6. For conduit mount, unscrew the 1/2" NPT plug located at the top of the fixture, and screw in the user supplied conduit hub.

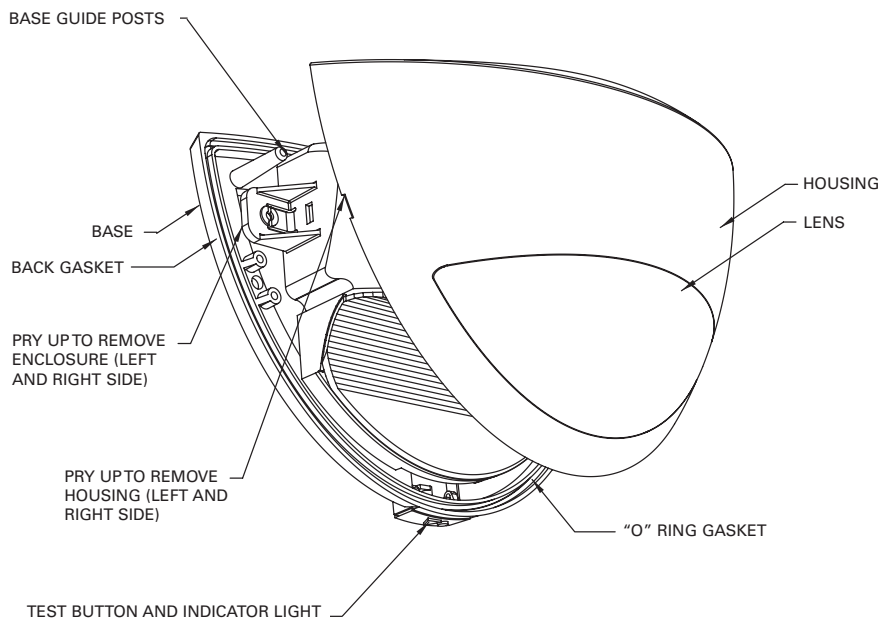

Cooper Lighting

by **EAT•N**

Installation Instructions – AEL2 Wall Sconce Emergency Light

7. Connect the ground wire to the green screw on the base.
8. Connect the white wire to neutral.
9. If operation as a standard emergency light is desired (lights are only on in an emergency) then connect 120 through 277V hot wire to the black lead (Labeled H on the terminal block). The AEL2 utilizes a sophisticated universal power supply, so either voltage can be applied to the black wire.
10. If operation as an unswitched wall sconce and emergency light is desired, connect the black and the red wires to the incoming power wire.
11. If operation as a switched wall sconce and emergency light is desired, first connect the black wire to incoming power. Next, connect a switch between the red wire and the black wire / incoming power.
12. Unsnap the plastic cover on the back of the plastic enclosure, and plug in the battery. Replace the plastic cover.
13. Snap the enclosure back onto the base. Snap the housing back onto the base. Make sure the housing is fully seated against the backplate in order to insure rain resistant seal.
14. Energize AC supply, the red indicator LED will begin to blink to show that the batteries are charging. Press the button briefly (less than 2 seconds) to perform a 30 second test.

HIGH/LOW MODE (ALWAYS ON MODE ONLY):

If the unit is used as a combination wall sconce and emergency light, it can be adjusted in sconce mode to power the white LEDs for high or low illumination. The AEL2 ships from the factory in low illumination mode. To change to high illumination, press and hold the test button for more than 10 seconds, and the illumination will change. To change back, press and hold the test button for another 10 seconds.

NOTE: High and low modes do not alter operation in an emergency. When power fails, the white LEDs will always illuminate at max brightness.

TESTING EMERGENCY MODE:

Briefly depress the test switch. The red indicator LED will turn off, indicating the unit is operating under battery power. If the white LEDs are off, they will illuminate. If white LEDs are already on in low mode, they will illuminate at max brightness. If white LEDs already on in high mode, they will continue to operate at max brightness.

MAINTENANCE

None required. Replace the batteries as needed according to ambient conditions. However, we recommend that the equipment be tested regularly in accordance with local codes.

NOTE:

Servicing of any parts should be performed by qualified personnel. Only use replacement parts supplied by Eaton's, Cooper Lighting business.


CAUTION:

This equipment is furnished with a sophisticated low voltage battery dropout circuit to protect the battery from over discharge after its useful output has been used. Allow 24 hours recharge time after installation or power failure for 90 minute testing.

TROUBLE SHOOTING HINTS:

If white LEDs or red charge indicator LED does not illuminate, check the following:

1. Check AC supply – verify that unit has a 24 hour AC supply.
2. Unit is shorted or battery is not connected.
3. Battery is discharged. Permit unit to charge for 24 hours and then re-test.
4. If following the above trouble shooting hints does not solve your problem, contact your local Cooper Lighting representative for assistance.

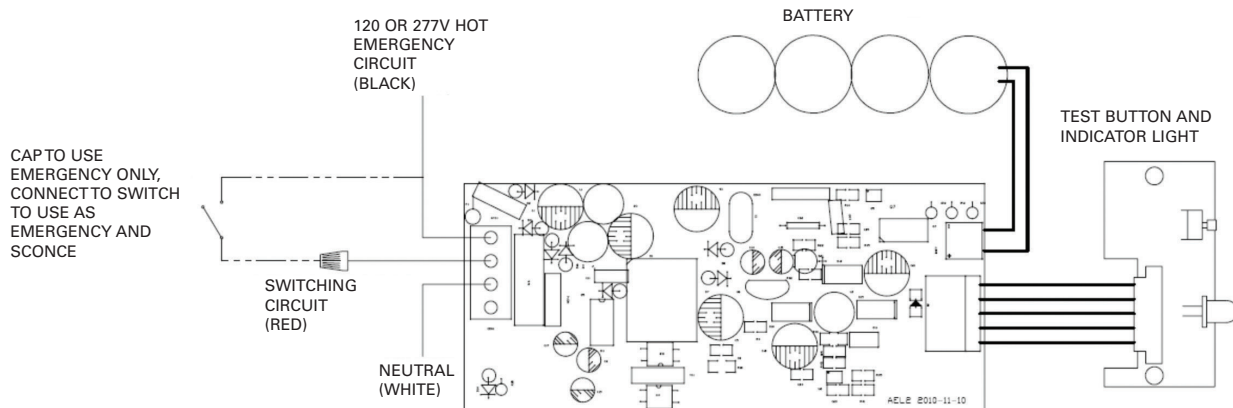

Warranties and Limitation of Liability

Please refer to www.cooperlighting.com/WarrantyTerms for our terms and conditions.