

⚠ IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to person, including the following:

1. Read all instructions before using this linear convectector baseboard.
2. Heater and controls should be installed by a qualified contractor. Wiring procedures and connections should be in accordance with the National Electric Code (CEC & NEC) and local codes.
3. A linear convectector baseboard has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
4. This linear convectector baseboard is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials such as: furniture, pillows, bedding, papers, clothes and curtains away from linear convectector baseboard.
5. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces like a bed where openings may become blocked.
6. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the linear convectector baseboard.
7. Do not install these linear convectector baseboards against combustible, low density cellulose fibre surfaces or vinyl wallpaper.
8. Do not locate these linear convectector baseboards below any electrical convenience receptacles.
9. Check baseboard nameplate ratings to be sure linear convectector baseboard voltage is the same as the service supply. (The nameplate is located below the right side of the heating element.)

SAVE THESE INSTRUCTIONS

🔧 Installation Instructions

PLACEMENT OF THE LINEAR CONVECTOR BASEBOARD

Linear convectector baseboards are high performance heaters designed to operate at higher outlet temperatures than conventional baseboard heaters. They can be directly mounted onto drywall, plaster, wood or concrete walls. Due to the higher outlet temperature, the wall surface can reach temperatures of 138° F (59° C) and some materials may discolor or deform at these temperatures, e.g. vinyl or plastic.


! NOTE: If the unit is being installed on a newly constructed wall, ensure that all products that have been applied are fully cured according to manufacturer's instructions, before operating the unit.

RECOMMENDATIONS FOR LOCATING DRAPES AND FURNITURE NEAR HEATER (FIGURE 1)

! NOTE: Any objects or materials that are located within the distances outlined below should not discolor, nor distort dimensionally (stretch or shrink) upon extended exposure (up to 1000 hrs.) to temperatures of 200° F (93° C).

For most satisfactory operation of the heaters and minimum effect on drapes, furniture and objects in close proximity, the following recommendations should be observed:

1. **Full Length Drapes:** Hang drapes so there is at least 1.5" (3.8 cm) between the top of the drapes and the ceiling, at least 1.5" (3.8 cm) between the bottom of the drapes and the finished floor covering (such as carpet, if used) AND at least 3" (7.6 cm) between the front vertical surface of the heater and the nearest fold of the drapes (opened drape). (Figure 1A)
2. **Shorter Length Drapes:** Hang drapes so there is at least 1.5" (3.8 cm) between the top of the drapes and the ceiling, and at least 6" (15.3 cm), preferably more, between the bottom of the drapes and the top horizontal surface of the heater. (Figure 1B)
3. **Furniture:** Place furniture no closer than 3" (7.62 cm) from the front of the linear convectector baseboard. (Figure 1D)

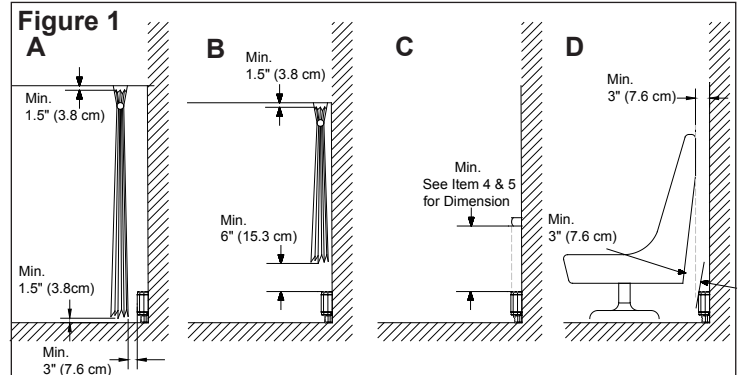

4. Overhanging Solid Objects (Except Plastic): Position Baseboard so there is at least 10" (25.4 cm) between the top of the heater and any solid object that obstructs or redirects the vertical air flow out of the top of the unit. (Figure 1C)

5. Overhanging Plastic Objects: All Plastic items that cannot withstand extended exposure to temperatures 60° C or higher should be kept a minimum of 14" (35.6 cm) above the unit. (Figure 1C)

! NOTE: Ensure that when 2 linear convectector baseboards are installed near the same corner they are both a minimum of 6" (15.3 cm) from the corner.

FACTORY WIRING OF THE LINEAR CONVECTOR BASEBOARD

All linear convectector baseboards have provisions for connection to either end of the linear convectector baseboard. The lead wires at either end are factory spliced with wire nuts as a closed circuit. The circuit may be opened at either wire nut connection to make connections to the power supply and/or to the desired controls. (See Wiring Diagrams)

CONTROLS (not included)

A thermostat control (wall mounted or built-in) is required to operate this unit. Typical Dimplex controls:

- Built-in thermostat kits: DTK-SP, DTK-DP, DTKT-SP or DTKT-DP
- External line voltage thermostats: TS521W, TD522W, HTC521W, HTC525W, HTC621W or HTC625W
- Built-in low voltage relay: BLLVCxx or BLLVD

INSTALLATION

⚠ WARNING: Disconnect power supply before installation to prevent electric shock.

1. Unpack and place the baseboard on floor face down and tear open end of carton, use packaging to protect floor, if required.
! NOTE: Heater fins can be easily bent. For optimal performance ensure that they remain vertical.
2. Orient unit in desired location and mark pilot holes - top and bottom at both ends and at least one set in middle.
3. Remove rear cable clamp and wire unit as per diagrams on page 6 and National and Local Electrical Codes.

⚠ CAUTION: Connect heaters to a branch circuit used only for permanently installed heater and protected by over current devices rated or set at no more than 30A. The total connected load should not be more than 80% of the rating of the over current devices. It may cause a fire hazard if not installed and maintained in accordance with these instructions.

4. Position linear convectector baseboard, pushing cable back into wall (or conduit), run screws through pre-selected mounting holes and spacers (if applicable), using appropriate wall anchors, if necessary.

! NOTE: Screw should be backed off 1/2 turn from snug position to allow free expansion and contraction of housing and to ensure quiet operation.

5. Replace covers on unit, and reinstall rear cable clamp.

! NOTE: Install the center cover first, by installing the top first, then the bottom.

WIRING MULTIPLE LINEAR CONVECTORS TOGETHER

Linear Convectors can be wired in together in parallel to be controlled by a single thermostat. When units are wired in together ensure that ground continuity is maintained between the units.

Operation

1. This baseboard must be properly installed before it is used.
2. Prior to energization remove all construction dirt (plaster, sawdust, etc.) from interior and exterior of linear convector baseboard.

Dimplex linear convector baseboards are designed and tested for safe and trouble-free operation. All Dimplex linear convector baseboards are protected against overheating by a built-in thermal cutout. Free airflow throughout the linear convector baseboard is extremely important for the most efficient operation of the linear convector baseboard. Restricted airflow may cause the thermal overload protector to cycle the linear convector baseboard "ON and OFF". A cycling convector baseboard will not supply sufficient heat to the room.

⚠ CAUTION: Avoid direct contact of paper, fabric, or furniture with convector baseboard, to prevent a possible fire.

Maintenance

⚠ CAUTION: Before removing the front cover for cleaning, make certain the power has been turned off at the circuit breaker panel, to prevent electric shock.

⚠ CAUTION: To avoid burns, allow adequate time for the element and body casing to cool before attempting to work on the linear convector baseboard.

The LCM series contain no moving parts. Since the appliance contains no moving parts little maintenance is required beyond vacuum cleaning. It is however essential that the linear convector baseboard is not operated with an accumulation of dust or dirt on the element, as this can cause a build up of heat and eventual damage. For this reason the linear convector baseboard must be inspected regularly, depending upon conditions and at least at yearly intervals. Once cleaning is complete replace the front cover and restore power.

! NOTE: The user can perform cleaning ONLY. All other servicing should be performed by qualified service personnel.

Warranty

The Manufacturer warrants the convector baseboard and components of the enclosed product against any defect in material or workmanship for a period of one year from the date of purchase, with the exception of the elements which are warranted to be free from defect in material and workmanship for ten years. In full satisfaction of any claims under this Warranty the Manufacturer will repair or replace without charge, in its factory or in the field as it alone may decide, any parts which in its opinion are defective.

The Manufacturer shall not be responsible for any transportation or shipping costs in relation to such repair or replacement except as specifically assumed by it. Misuse of this product or repairs by persons other than the Manufacturer's authorized personnel without the Manufacturer's written approval, will void this Warranty.


This Warranty is in lieu of all other warranties or conditions whether expressed or implied including but not limited to those of merchantability or fitness for purpose and shall constitute the sole remedy of the Purchaser and the sole liability of the Manufacturer in respect of the sale of the product, whether in the nature of breach or breach of fundamental term, or of negligence or otherwise.

The Manufacturer shall not be liable for any special, indirect or consequential damages or for any damages resulting from removal or replacement of a convector baseboard subject to warranty claim without the Manufacturer's authorization.


This Warranty is transferable by the original consumer purchaser of the product. Any claims under this Warranty must be submitted in writing to the Service Manager, Dimplex North America Ltd., 1367 Industrial Rd., Cambridge, Ontario N1R 7G8, Canada.

Wiring Instructions


- ⚠ CAUTION:** Do not bypass or eliminate thermal cutout from the circuit.
- ⚠ CAUTION:** Check tightness of all electrical connections and wire nuts.
- ⚠ CAUTION:** Grounding connection is required.

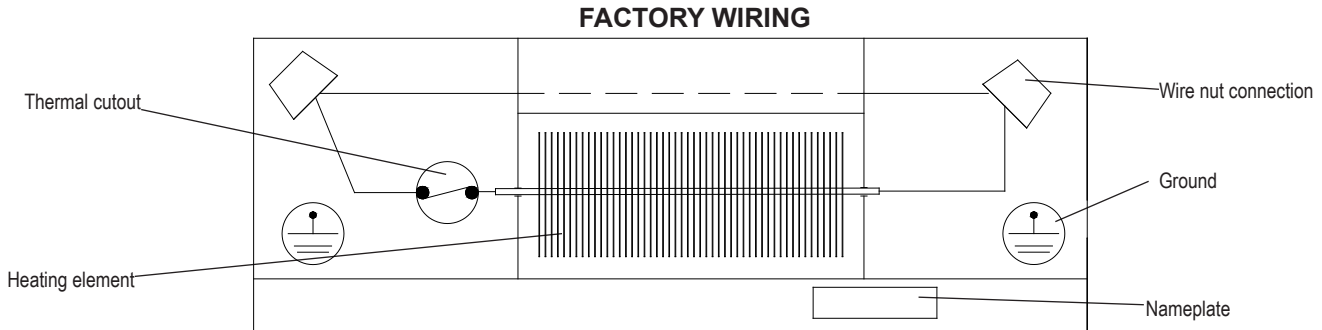

Right Side Power Connection

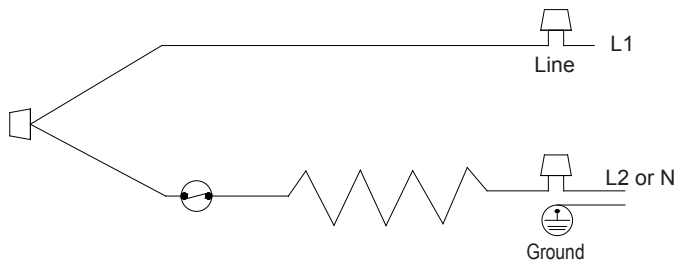


Left Side Power Connection

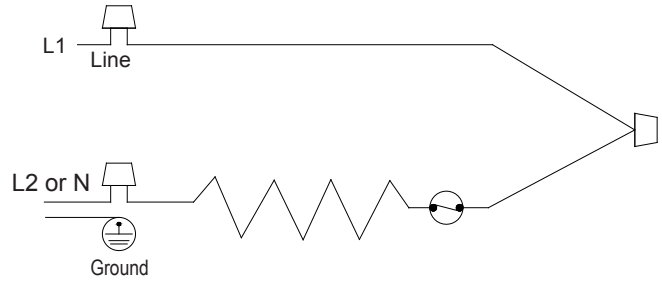


! NOTE: When control accessories are installed, use wiring diagram supplied with the accessory. Following are examples of wiring diagrams with thermostat.

Single Pole Thermostat

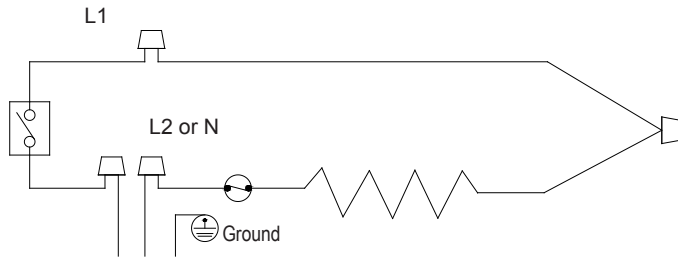

For right hand side connection use same logic.

Double Pole Thermostat

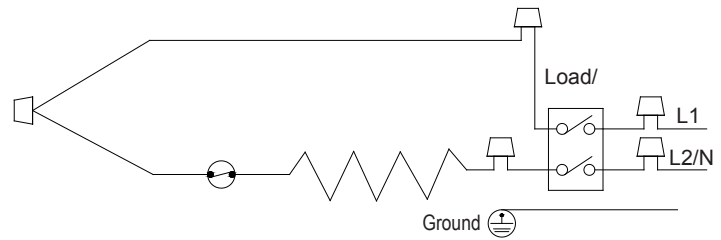

For Left hand side connection use same logic.



1367 Industrial Road • Cambridge ON Canada N1R 7G8
1-888-346-7539 • www.dimplex.com

In keeping with our policy of continuous product improvement, we reserve the right to make changes without notice.
© 2015 Dimplex North America Limited

