

INSTALLATION INSTRUCTIONS C-WP-A-TRAD Series

 Document:
 LPN00490X0001A0_A
 Date:
 03-22-2017

 Created By:
 TMT





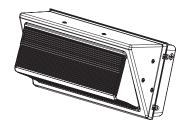

C-WP-A-TRAD-3L

C-WP-A-TRAD-8L



IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- DANGER- Risk of shock- Disconnect power before installation.
 - **DANGER** Risque de choc Couper l'alimentation avant l'installation.
- This luminaire must be installed in accordance with the NEC or your local electrical code. If you are not familiar with these codes and requirements, consult a qualified electrician

Ce produit doit être installé conformément à NEC ou votre code électrique local. Si vous n'êtes pas familier avec ces codes et ces exigences, veuillez contacter un électricien qualifié.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

MOUNTING

NOTE: Do not recess. Also make sure fixture is weatherproof by sealing all gaps and holes with weatherproof silicone sealant.

USING 1/2" PLUGS OR KNOCKOUTS IN THE BACK

- Remove lens assembly by loosening screws on side of frame. Swing lens assembly open, disconnect quick connect wiring connector(s) and lift lens assembly upward to remove from housing.
- 2. Drill appropriate knockouts from back of fixture for wiring access.
- 3. Fixture is best mounted by drilling through back of fixture securing it to the mounting surface using the appropriate mounting hardware for the surface. Mounting hardware supplied by others. When drilling holes, do not drill within 1/4" (6.4 mm) from edges of fixture, also use caution when drilling near the power supply not to nick, or leave metal chips behind. All unused holes must be plugged. Waterproof silicone will ensure a tight seal.

- Complete the wiring to the power source and ground (refer to wiring instructions).
- Replace lens assembly, re-connect wiring connectors, and swing lens assembly into place. Tighten screws that were loosened in Step 1.

USING 1/2" PLUGS ON THE SIDE

- Remove lens assembly by loosening screws on side of frame.
 Swing refractor open, disconnect quick connect wiring connector(s) and lift lens assembly upward to remove from housing.
- 2. Remove 1/2" plug from direction you intend to feed conduit.
- 3. Fixture is best mounted by drilling through back of fixture securing it to the mounting surface using the appropriate mounting hardware for the surface. Mounting hardware supplied by others. When drilling holes, do not drill within 1/4" (6.4 mm) from edges of fixture, also use caution when drilling near the power supply not to nick, or leave metal chips behind. All unused holes must be plugged. Waterproof silicone will ensure a tight seal.
- Feed conduit to the desired hole and complete the wiring to the power source and ground (refer to wiring instructions).
- Replace lens assembly, re-connect connectors, and swing lens assembly into place. Tighten screws that were loosened in Step 1.

FIXTURE WIRING

- Connect the black fixture lead to the voltage supply lead with customer supplied wire connector.
- Connect the white fixture lead to the neutral supply lead with customer supplied wire connector.
- Connect the green, or green/yellow, or bare copper ground lead to the supply ground lead with the customer supplied wire connector.

FCC NOTICE Class A

CAUTION: Changes or modifications not expressly approved could void your authority to use this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CAN ICES-005 (A)/NMB-005 (A)